



***Using
the***



Call Manager Features

(Student Guide)



Document and Software Copyrights

Copyright © 1998-2005 by ShoreTel Inc., Sunnyvale, California, U.S.A.

All rights reserved. Printed in the United States of America. Contents of this publication may not be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without prior written authorization of ShoreTel, Inc. ShoreTel, Inc. reserves the right to make changes without notice to the specifications and materials contained herein and shall not be responsible for any damage (including consequential) caused by reliance on the materials presented, including, but not limited to typographical, arithmetic or listing errors.

Trademarks

ShoreCare, ShoreTel, Shoreline, ShoreWare, ShoreGear, and AnyPhone are registered trademarks of ShoreTel, Inc. in the United States and/or other countries. Shoreline4 is a trademark of ShoreTel in the United States and/or other countries. Microsoft, Windows, Windows NT, and ActiveX are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. VxWorks is a trademark of Wind River Systems. All other copyrights and trademarks herein are the property of their respective owners.

Version Information

Using the ShoreTel Personal Call Manager
April, 2005

Company Information

ShoreTel, Inc.
960 Stewart Drive
Sunnyvale, California 94085
(408) 331-3300
(408) 331-3333 fax
www.shoretel.com

Table of Contents

LESSON 1: ShoreWare Call Manager Features	1-1
ShoreWare Call Manager	1-3
Launching Call Manager:	1-3
Quitting Call Manager:	1-3
Call Manager Views	1-4
Compact:	1-4
Detailed:	1-4
Docked:	1-4
QuickDialer	1-6
Active Call List	1-7
Dial Number:	1-7
Directory Viewer:	1-7
Dialing from the History Viewer:	1-8
Handling Calls	1-9
Answering Calls:	1-9
Placing a Call on Hold:	1-10
Hanging up a Call:	1-11
Transferring Calls	1-12
Just-In-Time Transfer:	1-12
Transfer to Mailbox:	1-12
Consultation Transfer:	1-13
Intercom Transfer:	1-13
Transferring to Auto Attendant:	1-14
Transferring to Voice Mail:	1-14
Keyboard Transfer:	1-15
Conference Calls	1-16
Intercom Conference Call:	1-17
Call Handling Modes	1-17
Configuring Call Handling Modes:	1-18
Recording Greetings for Call Handling Modes:	1-21
Voice Mail Delivery and Notifications:	1-21
Find Me Call Handling:	1-22
Voice Mail Preferences:	1-24
Outlook Integration	1-25
Voice Mail Integrations:	1-25
Installing Automatic Call Handling:	1-25
Memorized Phone Number Management	1-25
Getting Warnings in Nonstandard Modes:	1-27
Changing the Login ID	1-28
Call Pick Up Using Call Manager	1-29
AnyPhone Feature	1-30
Speed Dialing	1-31
Adding Speed Dial Entries:	1-31
Dialing from Your Speed Dial List:	1-31
Configuring the Call Stack	1-32
LESSON 2: SoftPhone	2-1
SoftPhone	2-3
Handling Calls	2-6
Receiving Calls:	2-6
Call Waiting:	2-7

Placing a Call on Hold:	2-7
Transferring a Call:	2-7
Making a Conference Call:	2-7
Managing Soft Phone Calls via Call Manager	2-8
Web Access	2-8
To Open ShoreTel Web Access:	2-8
LESSON 3: Workgroup Call Manager	3-1
Workgroup Call Manager	3-3
Agent Call Manager	3-3
Workgroup Queue Monitor	3-4
Agent Monitor	3-5
LESSON 4: Operator Call Manager	4-1
Operator Call Manager	4-3
Extension Monitor	4-5
APPENDIX:	
Things to Remember	A-3
Lab Exercises	A-5
Lab 1 – Using the Personal Call Manager	A-5
Lab 2 – Using the Workgroup Call Manager	A-9
Lab 3 – Using the Operator Call Manager	A-11

Lesson 1: ShoreWare Call Manager Features

Introduction

ShoreWare Call Manager software provides a complete set of enterprise-class desktop communications tools delivering improved productivity across an enterprise, despite office size or location. All Call Manager software provides several features that enhance productivity.

This lesson covers the features and functions of the ShoreWare Personal Call Manager.



Objectives

At the end of this lesson you will:

- Use the Personal Call Manager features and functions.
- Configure Outlook integration.



Resources

- *System Administration Guide*
- *Planning and Installation Guide*

ShoreWare Call Manager

Each ShoreWare Call Manager application provides different levels of control and management to match the role of each individual within your organization, from general employees to specialized operators and workgroup agents.

Personal Call Manager is an intuitive, point-and-click interface, which gives quick access to commonly used features, such as transfer and conference. In addition, the Personal Call Manager makes every phone a multi-line phone, allowing the user to visually manage up to 16 calls simultaneously.

The Personal Call Manager makes voice mail accessible and easy to manage. There is a separate application for viewing messages, the ShoreTel Voice Mail Viewer. If Outlook was installed prior to installing PCM, the user is given the option of using Outlook as the default voice mail client.

Launching Call Manager:

There are two ways to start Call Manager: from the Windows Start menu or by setting Call Manager to auto-start each time you log in to your computer. For the program auto-start, simply add it to the Windows *Startup* folder using the Settings tab in the *ShoreTel System* dialog box.

To start your Call Manager from the Start menu:

- Click *Start*, select Programs, select ShoreTel Communications, and click *ShoreTel Call Manager*. Call Manager opens.

To auto-start Call Manager at log in:

- Right-click the ShoreTel icon, a shortcut menu will appear. Click *Configure ShoreTel System*. The *ShoreTel System* dialog box appears.
- Click the *Settings* tab. Select Start Call Manager automatically when I log into Windows. Click *OK*.

Quitting Call Manager:

To quit Call Manager - Right-click the Call Manager icon in the Windows status area. A shortcut menu appears. Click *Exit*. The Call Manager application quits.

Call Manager Views

Call Manager can be viewed in 3 different ways:

Compact View: This view appears when you first open the Call Manager application. This view provides a compact interface for managing your communications. This view contains a *toolbar*, *Active Call* list, and *QuickDialer*. The toolbar provides access to most functions in this view. Additional features are available if you right-click the ShoreTel icon.



Figure 1.1 – Compact View

Detailed View: This view provides the *QuickDialer*, the *Active Call* list and the *Call Details* area at the same time. In this view, the menus provide access to all features. Additionally, there are toolbar buttons for many features.

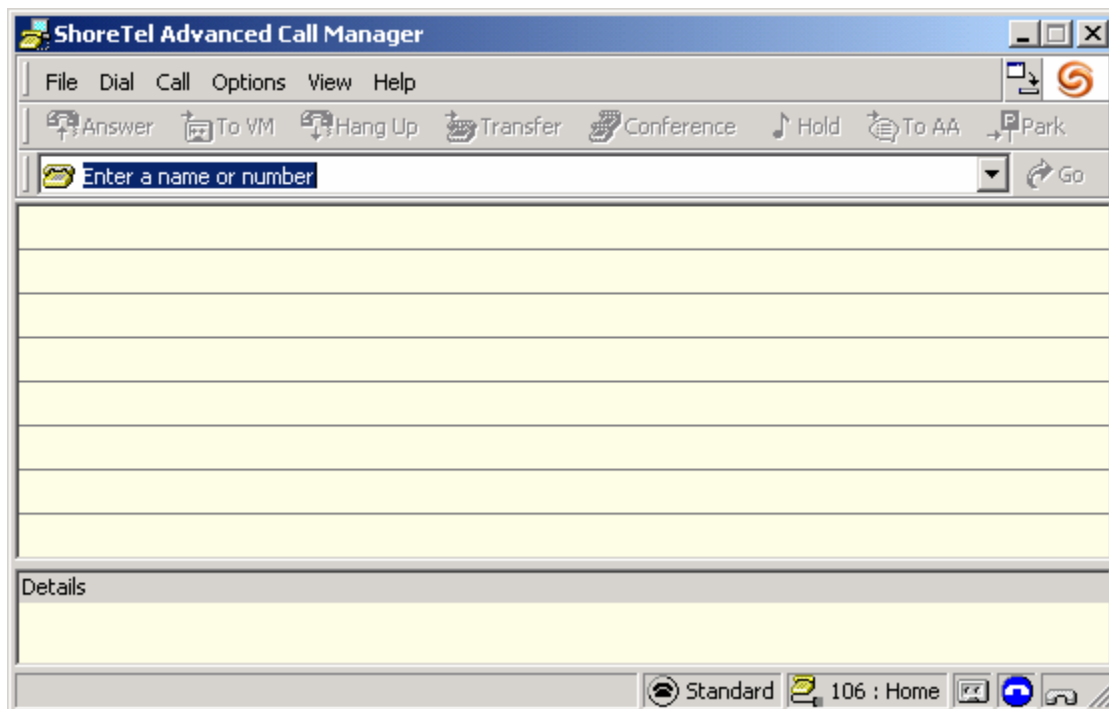


Figure1. 2 – Detailed View

Docked View: This view is like a toolbar that can be docked for quick access at the bottom or top of the Windows desktop.

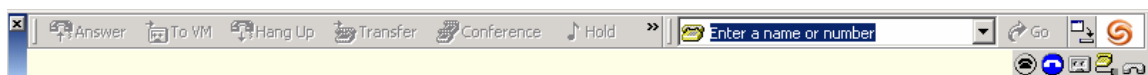


Figure1. 3 – Docked View

To switch between Compact and Detailed views: - From the *Compact* view, click the *Expand* button, the view changes to *Detailed*. From the *Detailed* view, click the *Collapse* button, the view changes to *Compact*.

To switch from the Compact or Detailed view to the Docked view: - Drag the Call Manager window to the top or bottom of the Windows desktop. You can expand or collapse the *Docked* view by clicking the *Expand* or *Collapse* button.

Note: You can use the View menu in the *Detailed* or *Docked* view to switch to any other view.

Call Manager windows can be maximized and minimized in any view. When you click the x in the upper right corner in any of Call Manager's windows, you are minimizing the application. When the application is minimized a Call Manager icon appears in the Windows status area. Maximizing Call Manager, simply double-click the Call Manager icon in the Windows status area. The Call Manager window will launch in the last view you were using.

Note: You can have Call Manager maximized automatically when you receive or make a call.

You can use the following buttons to perform various Call Manager functions and operations. Different subsets of these buttons are available at any given time, depending on the view you are in.


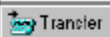
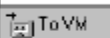
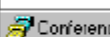

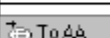
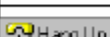
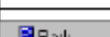
Button	Name	Use to:
	Answer Button	Answer a call.
	Transfer Button	Transfer an ongoing or incoming call to another party.
	To Voice Mail Button	Transfer a call to your voice mailbox.
	Conference Button	Add a party to a conference call.
	Hold Button	Put a call on hold or retrieve a call already on hold.
	To AutoAttendant Button	Transfer a call to the AutoAttendant.
	Hang Up Button	Terminate a call.
	Park Button	Put an active call on hold on another available extension.

Figure 1.4 – Function Buttons

QuickDialer

Automatic Look up with the QuickDialer provides an intelligent search of both personal and system directories and Outlook contacts to find and dial a number instantly.

The *QuickDialer* gives you a way to quickly make phone calls without picking up the phone and dialing the number yourself.



Figure 1.5 – QuickDialer

In *QuickDialer*, you can:

- Type the name of the person you want to call
- Type the phone number of the person you want to call
- Dial contacts from various sources, including MS Outlook
- Redial recently dialed numbers. You can also dial numbers like 1-800-FLOWERS and QuickDialer will translate the letters to numbers automatically.
- Outlook Contacts with company names are now read by PCM so you can also enter the company name to show a filtered list of contacts from the same company.

In *QuickDialer*, begin typing the name or phone number of the party you want to call, and as you continue typing more characters, the search narrows. This approach can be used to match entries in your personal or system directories or Outlook contact folders. (If you type the phone number, remember to include country, city, and area codes for numbers outside your local calling area.)

Note: When you enter a number, or a number appears from a directory or your Outlook contacts folders, and it indicates a main number followed by an internal extension, indicated with a character such as the X or x character, the character is not converted to a digit and cannot be dialed; therefore, the number is not dialed.

After selecting the correct number from the matching list, or you type an extension in the *QuickDialer* and press Enter, your phone rings. (This is true only if you are using an analog phone. If you are using an IP Phone, the phone will automatically go off-hook in speakerphone mode and the call will be placed). When you answer, the call is connected.

Note: If your company uses three-digit extensions, when you dial n-n11 (for example, 9-411 for information), the Quickdialer displays the name of the person who has the internal n11 extension. However, the call connects to the external n11 number.

Active Call List

Current calls appear in the *Active Call* list. The *Active Call* list shows the caller ID (if available), the call duration, the number the caller dialed, and the caller's name (if the caller ID matches an entry in a directory or in MS Outlook). Caller ID (name and number) can come from the PSTN on inbound calls. Also, the Active Call list shows the trunk group name and port/channel.

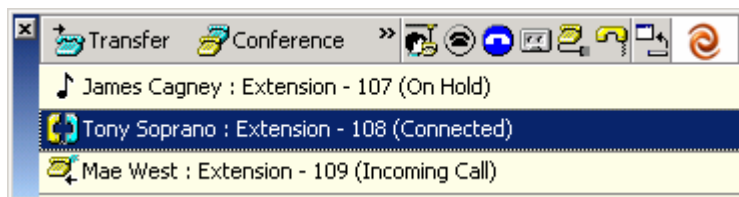


Figure 1.6 – Active Call List

To make a call by dragging a number, or select a number in an open document or Web page, simply drag the number onto the *Active Call* list. The *Active Call* list displays the status of the outgoing call and the Outgoing call icon.

Dial Number:

To make a call using the Dial Number dialog box, right-click the ShoreTel icon. A shortcut menu appears. Click *Make New Call*. The Dial Number dialog box appears. Type the name of the party until a match is found and selects the matching name from the list. Click *Dial* to start the call.

Tip: If you type letters for the number (for example, 1-800-Flowers, the letters are converted to the correct numbers (1-800-356-9377). If the extension is available, the call status and availability of the other users in the system appear in the QuickDialer and in the New Call dialog box. Call status of other extensions only appear if the user is configured to use Advanced Call Manager.

Directory Viewer:

For users who don't use Microsoft Outlook, the Directory Viewer keeps track of all your system and personal phone numbers. You can manually add personal contacts, import personal contacts from Outlook (or other address books like ACT or Goldmine), and export system and personal contacts to Outlook or other address books from the Directory Viewer. The Directory Viewer is shown in diagram below.

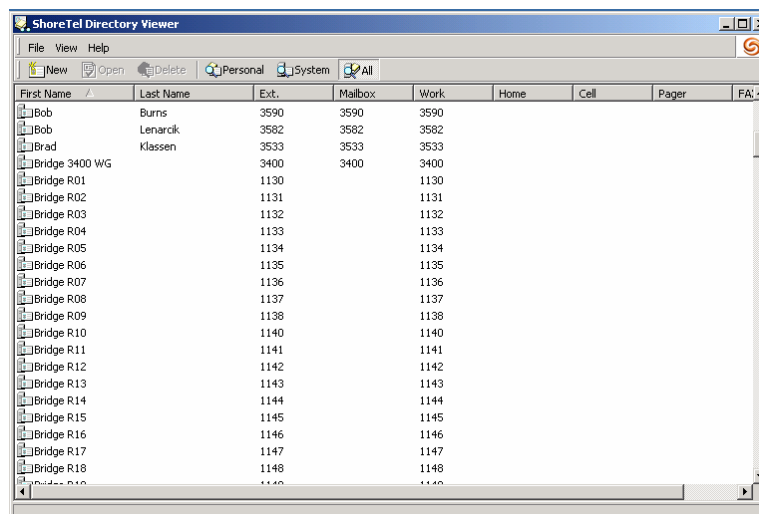


Figure 1.7 – Directory Viewer

Dialing from the History Viewer:

Easy-to-Use Call History allows you to quickly view inbound and outbound call information, including phone number, caller ID, time, date, and call duration.

The ShoreTel History Viewer displays information about previous calls you have made, received or missed. It can be used to display calls you made and the phone numbers of people who called you, and allows you to view and add notes to the call routing slips of all calls.

You can view the routing slip of a call in the ShoreTel History Viewer by right-clicking the ShoreTel icon. A shortcut menu appears. Click *History*. The ShoreTel History Viewer appears with the most recent call at the top of the list. Select and right-click the entry you want to view. A shortcut menu appears. Click *Properties*. The Call Log Entry Properties dialog box appears. Click the *Routing Slip* tab. The routing slip for the selected entry appears.

The History Viewer includes the number of an outgoing call's destination, the number of an incoming call's source, and the start time and duration of each call.


The History Viewer shows the last 1000 calls. A call gets added to the list when the call is complete. Old calls (which exceed the 1000 limit) are deleted when the application quits.

Note: If the received or dialed number matches an entry in the System directory, your personal contacts, or your Outlook contacts, the name is also displayed.

To dial a number in the History Viewer, right-click the ShoreTel icon and a shortcut menu appears. Click *History*, the ShoreTel History Viewer appears with the most recent call at the top of the list.



Select History Viewer, and then right-click the number you want to call. A shortcut menu appears. Click *Dial*. Call Manager dials the selected number.

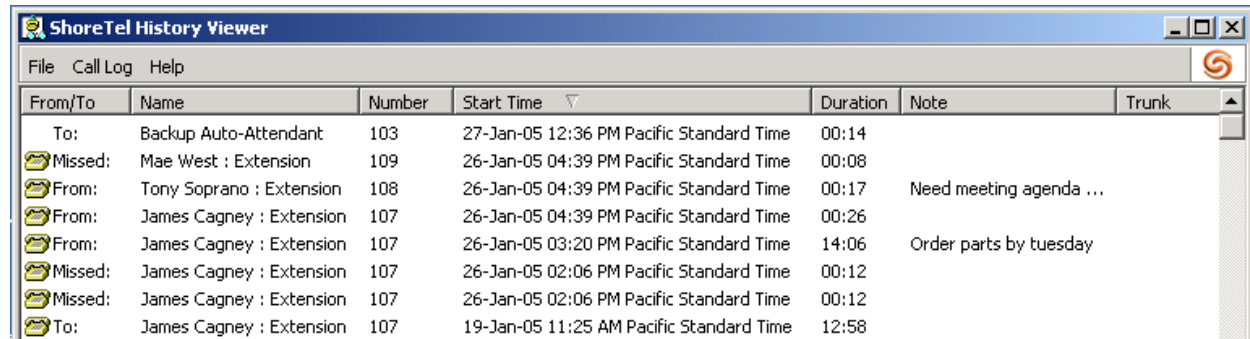

From/To	Name	Number	Start Time	Duration	Note	Trunk
To:	Backup Auto-Attendant	103	27-Jan-05 12:36 PM Pacific Standard Time	00:14		
Missed:	Mae West : Extension	109	26-Jan-05 04:39 PM Pacific Standard Time	00:08		
From:	Tony Soprano : Extension	108	26-Jan-05 04:39 PM Pacific Standard Time	00:17	Need meeting agenda ...	
From:	James Cagney : Extension	107	26-Jan-05 04:39 PM Pacific Standard Time	00:26		
From:	James Cagney : Extension	107	26-Jan-05 03:20 PM Pacific Standard Time	14:06	Order parts by tuesday	
Missed:	James Cagney : Extension	107	26-Jan-05 02:06 PM Pacific Standard Time	00:12		
Missed:	James Cagney : Extension	107	26-Jan-05 02:06 PM Pacific Standard Time	00:12		
To:	James Cagney : Extension	107	19-Jan-05 11:25 AM Pacific Standard Time	12:58		

Figure 1.8 – History Viewer

Handling Calls

The following features allow you to handle calls quickly and efficiently.

Answering Calls:

When you receive a call, the *Active Call* list displays the incoming caller information and the Incoming Call icon. The caller information includes the caller's telephone number and a matching name if it is available in the System directory, your Personal directory, or in your Outlook contacts. You'll also see the number that the caller dialed.

Note: If multiple matches are found, only the first match shows in the Call Manager.

Click the call status in the *Active Call* list displays Connected and the Connected icon appears. Begin talking.

Note: If you are in Handsfree Mode, using a headset or speakerphone, you should leave your phone off the hook.

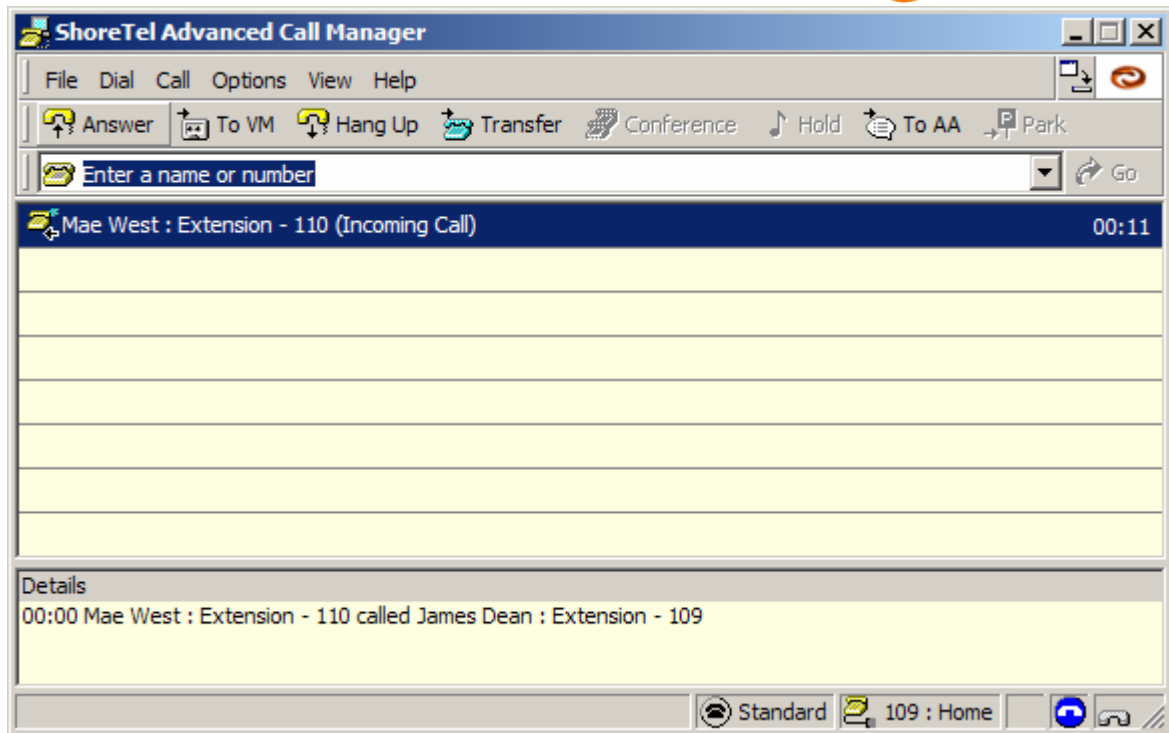


Figure 1.9 – Answer Incoming Call

Placing a Call on Hold:

You can place a call on hold using the Call Manager when you need to check some information or answer another call. The call appears in the *Active Call* list. The call status displays Connected and the Connected icon appears.

Double-click the call in the *Active Call* list to place it on hold. The call status changes to On Hold and the On Hold icon appears.

To take a call off hold, double-click the call on hold in the *Active Call* list or pick up the receiver. You can also click the *Hold* button again to take the call off hold.

When you place a caller on hold and hang up, the telephone rings once after 10 seconds notifying you that a call is on hold. If the first recall is ignored, the phone rings on a 60-second interval until the holding party either is connected or hangs up.

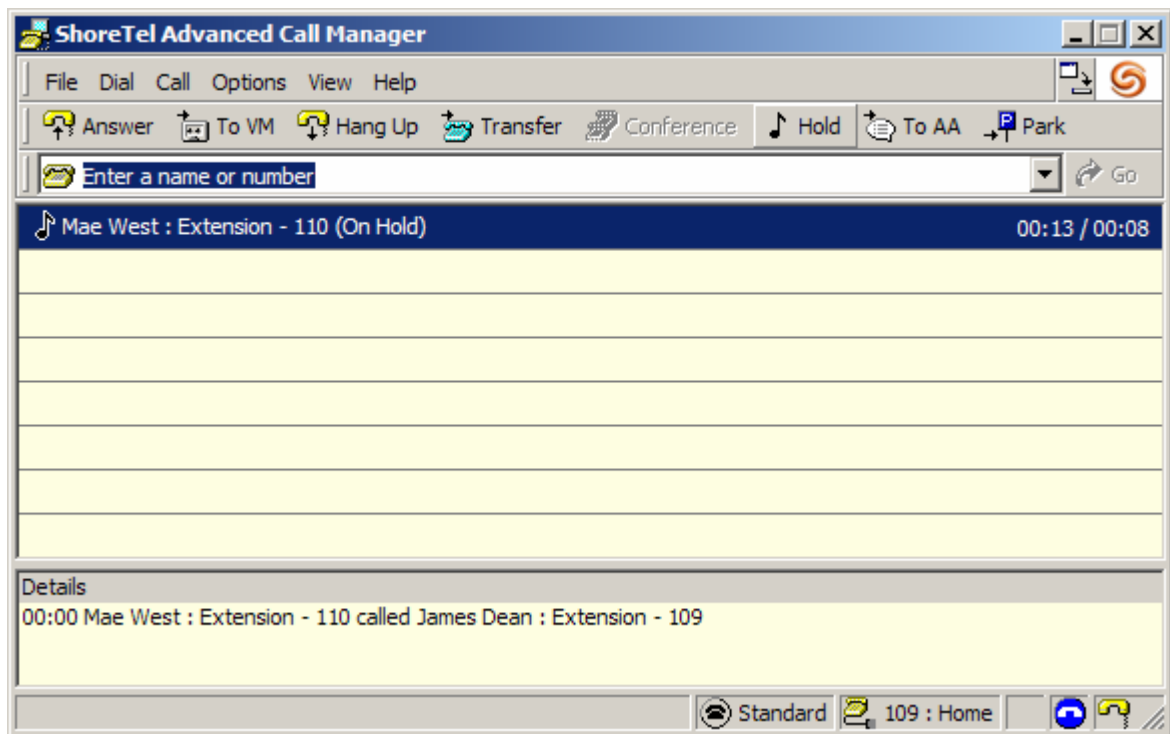


Figure 1.10 – On Hold

Hanging Up a Call:

How you hang up a call depends on the mode in which you answer the call. To hang up an active call, place the receiver on the hook. Your active call is disconnected.

To hang up an active call in the Handsfree mode, from the *Compact* view, click the *Toolbar Extender*, an additional toolbar appears. Click *Hang up*, your active call is disconnected.

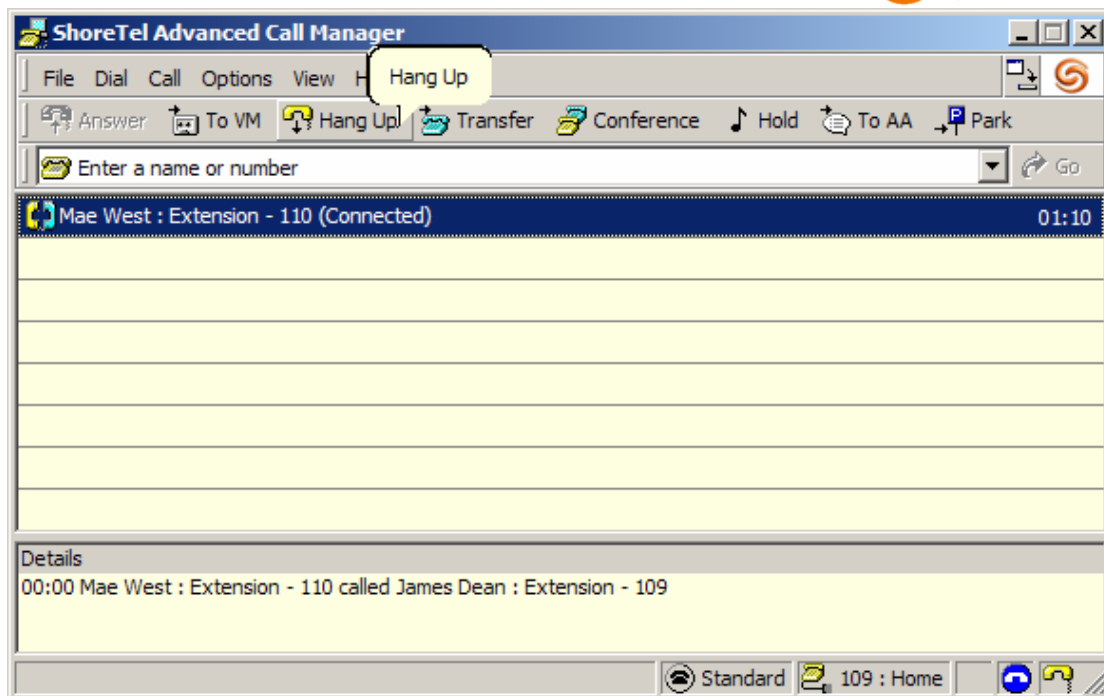


Figure 1.11 – Hang up

Transferring Calls

Just-in-time Transfer:

The Just-in-Time (JIT) feature allows you to see if the internal user you want to transfer the call has activated a non-standard Call Handling Mode and how many calls the user is currently handling. If you see that the user is in a non-standard Call Handling Mode, you can send the call to the user's voice mail or select another extension to transfer the call to.

Transfer to Mailbox:

To transfer a call to another party – Click the *Transfer* button, a dialog box will appear. In the Dial box, type the name or number of the destination to transfer the call. Click the *Transfer* button again to complete the transfer. To transfer a call to another person's voice mailbox, click the *Transfer* button and in the Dial box, type the name or number of the person to whom you want to transfer the call. Click *To Mailbox*.

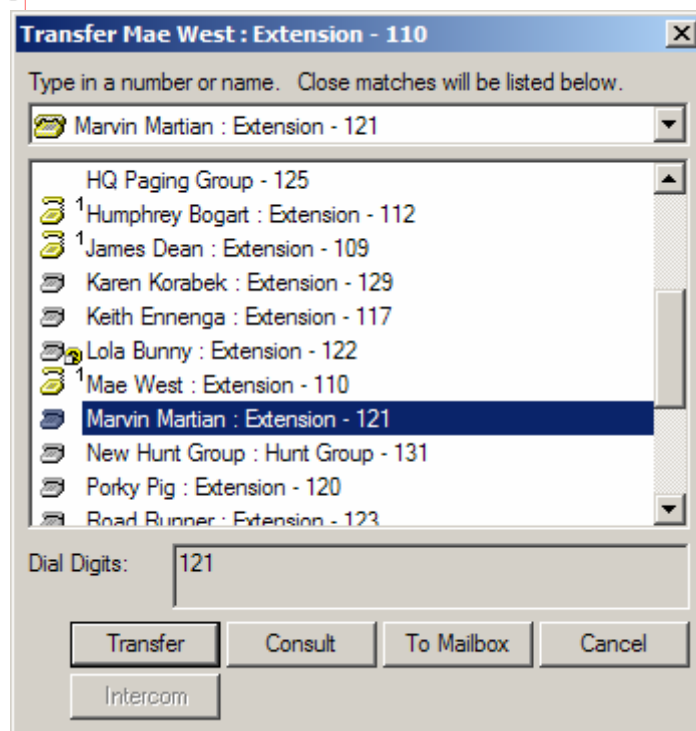


Figure1.12 – Just in Time Extension Status (JIT)

Consultation Transfer:

If you would like to announce the call to the transfer destination, you can make a consultation transfer. To do this, click the *Transfer* button, a dialog box will appear.

In the Dial box, type the name or number of the destination to transfer the call. Click *Consult*.

The phone you are transferring to rings and the Complete Transfer message appears on your computer. When the party answers, announce the transfer before completing the transfer. Click *Yes* in the Complete Transfer dialog box to transfer the call. The caller is transferred to the selected destination, OR should the destination refuse the transfer, simply click *No* to cancel the transfer and reconnect back to the caller.

Intercom Transfer:

Click the *Transfer* button, a dialog box appears. In the Dial box, type the name or number of where you want to transfer the call. Click *Intercom*.

If the extension you are transferring to is an IP phone, the phone plays an interrupt tone and you can speak to the user via the speakerphone. If the extension you are transferring to is an analog phone, the intercom transfer is offered just like a consultation transfer.

Click *Yes* in the Complete Transfer dialog box to transfer the call. The caller is transferred to the selected destination OR should the destination refuse the transfer, simply click *No* to cancel the transfer and reconnect back to the caller.

Transferring to Auto Attendant:

You can transfer an incoming call to the Auto Attendant. After being transferred, the caller can determine how to complete the call by listening to the Auto Attendant's menu.

If in the *Compact* view, click the *Toolbar Extender*. An additional toolbar appears. If you are in the *Detail* view, the toolbar will already be present. Click *Auto Attendant*, a dialog box appears prompting you to confirm the transfer to the Auto Attendant. When you click *Yes*, the transfer is completed.

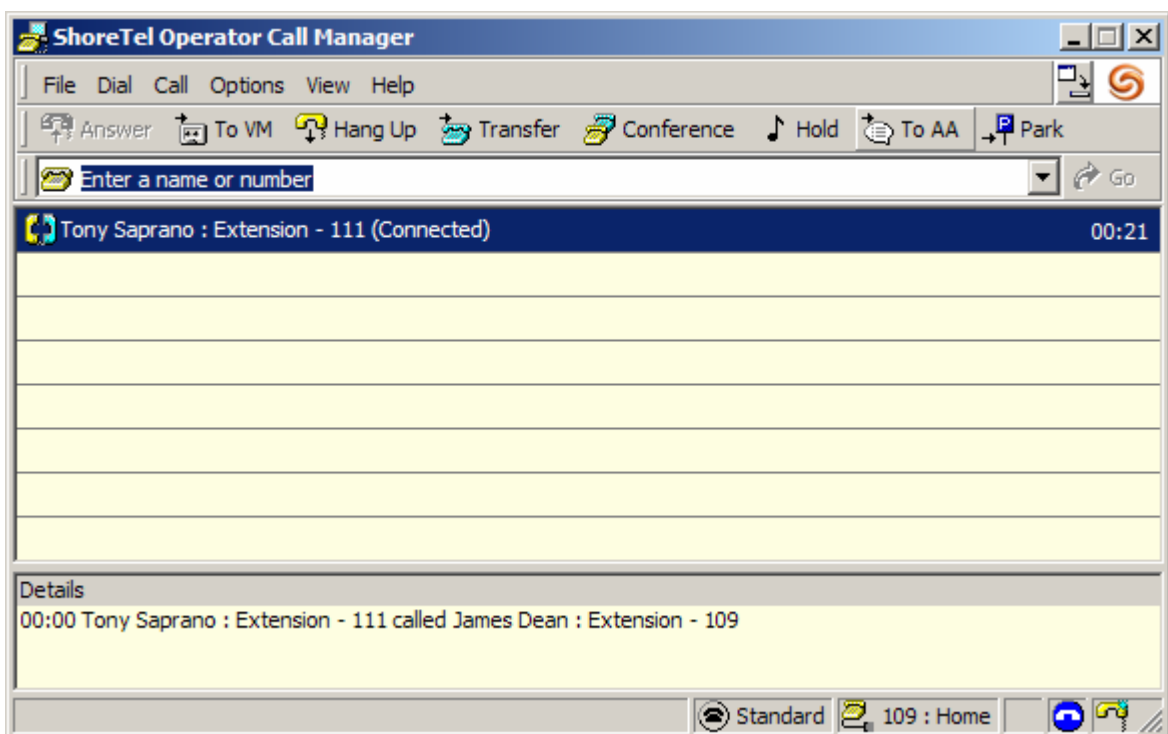


Figure 1.13 – Transfer to Auto Attendant

Transferring to Voice Mail:

If you don't want to be interrupted when you are busy and a call comes in, you can send the call to Voice Mail. To send a call to Voice Mail, in the *Compact* view, click *Voice Mail*. The caller is connected to your voice mailbox and hears the greeting for the current Call Handling Mode.

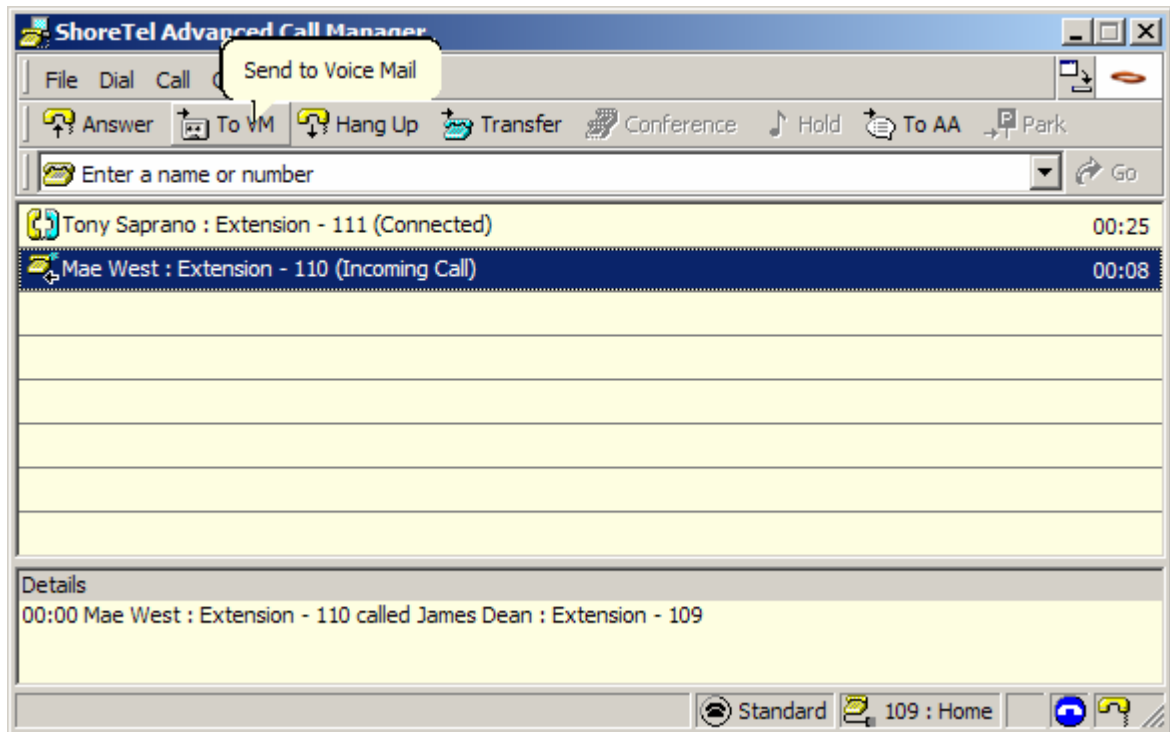


Figure 1.14 – Transfer to Voice Mail

Keyboard Transfer:

You can also answer and transfer calls using the function keys. This time-saving feature is particularly useful for Operators and others who answer and transfer numerous calls.

Note: If you are using an analog phone, you must be in Handsfree Mode to answer a call using the keyboard.

Press F8 (or Ctrl+A) to answer the call. Press F10 to transfer the call. In the *Quick Dialer*, enter the name or phone number of the person to whom you want to transfer the call, and click *Enter* to complete the transfer.

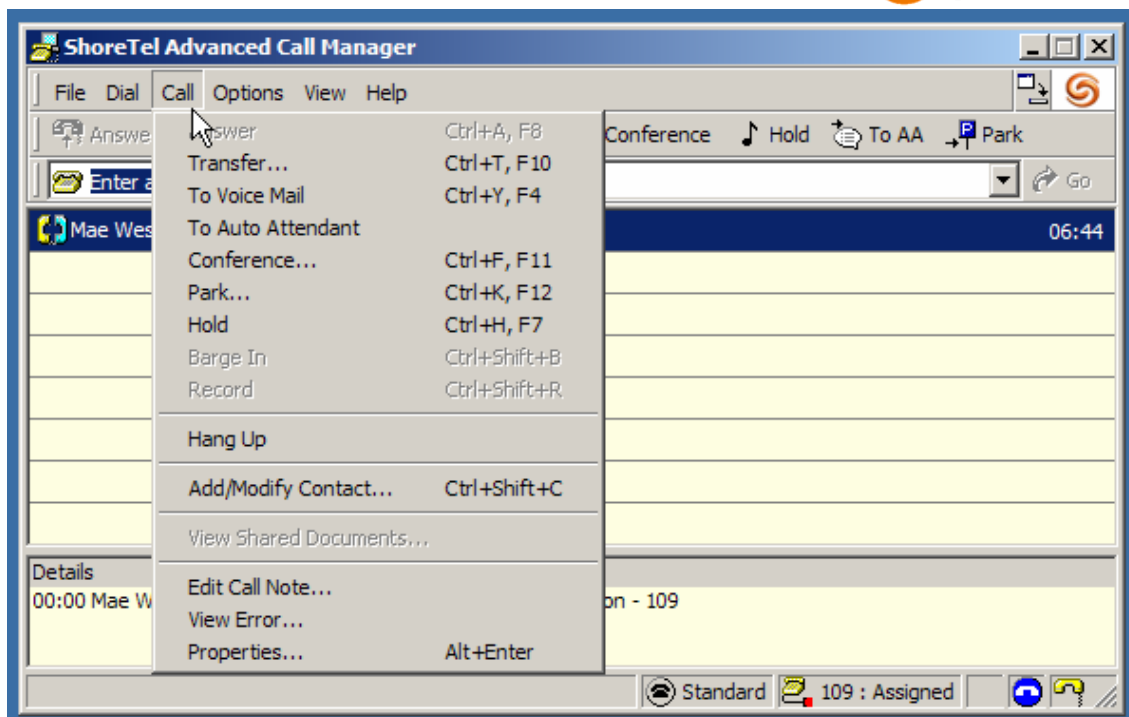


Figure 1.15 – Keyboard Shortcuts

Conference Calls

You can turn an *Active call* into a conference call by adding a third party. The 2 other parties in the conference call do not need to be members of the ShoreTel System. You can also consult with the third party before connecting them to the conference call.

The Just-in-Time feature allows you to see if the third party is in a non-standard Call Handling Mode and how many calls they are currently handling. Advanced Call Manager only.

To add a third party to an active call - From the *Compact* view, click the *Conference* button and a *Conference* dialog box appears. In the Dial box, type the name or number of the third party you want to add. Click *Conference*. All parties are on the line and the *Active Call* list will reflect this. To announce the conference, click *Consult*, then click *Yes* in the *Complete Conference* dialog box to establish the conference call, or Click *No* to cancel the conference call and reconnect back to the caller.

Note: Depending on your permission settings, you may be able to have up to a 6 party conference call.

Intercom Conference Call:

Click the *Conference* button, the *Conference* dialog box appears. In the Dial box, type the name or number of the third person you want to add. Click *Intercom*.

If the extension you are adding to the conference is an IP phone, the phone plays an interrupt tone and you can speak to the user via the speakerphone. If the extension you are adding to the conference has an analog phone, the intercom conference is offered just like a consultation conference. Click *Yes* in the Complete Conference dialog box to add the new person OR click *No* to cancel the conference call and reconnect back to the caller.

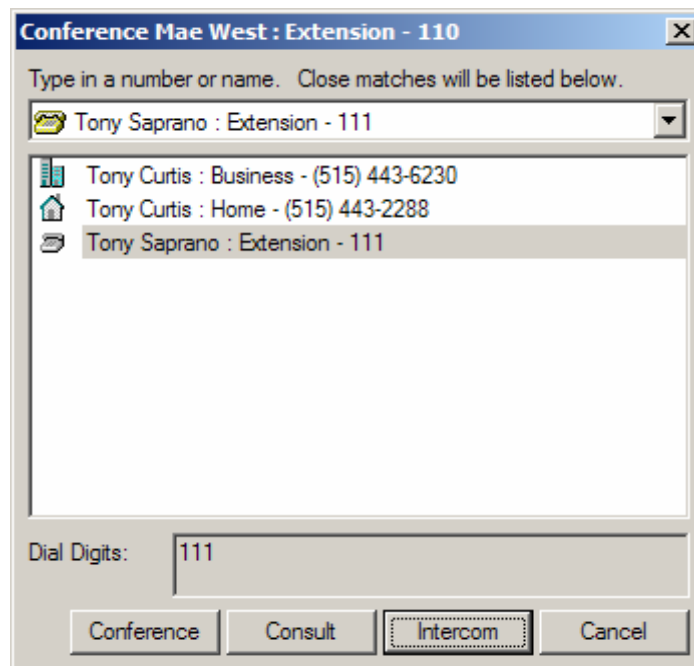


Figure 1.16 – Conference Call Options

Call Handling Modes

Call Handling options allows you to manage incoming calls when in a meeting, working from home, or out of town. Every user on the system has 5 call handling modes providing a wide array of call forwarding and personal greeting options.

Call Handling Modes are used to provide different options for handling phone calls. Each mode can have different call forwarding options and different voice mail greetings. For example, when you are out of the office, you might want your calls forwarded to your cell phone. When you are in meetings, you might want your calls to be sent to your voice mail. And if you are on vacation, you might want your calls forwarded to a co-worker.

Call Manager comes with predefined activities for each of the five Call Handling Modes. You can redefine the default activity for each mode.

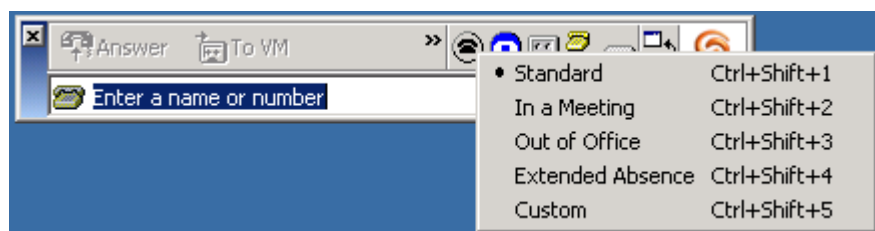


Figure 1.17 – Call Handling Modes

You can record a greeting for 1 or all 5 Call Handling Modes. If you do not record a greeting for 1 of the Call Handling Modes, the ShoreTel System announces your name along with that mode's default voice mail greeting. For example, a caller would hear "Pat Smith is out of the office. Please leave a message at the tone."

The five Call Handling Modes are: Standard, In a Meeting, Out of Office, Extended Absence and Custom.

Configuring Call Handling Modes:

Click the current Call Handling Mode icon in the status bar. A shortcut menu appears with a list of the 5 modes. Click the desired Call Handling Mode. The indicator for the selected mode appears.

Right-click the ShoreTel icon, a shortcut menu appears. Click *Configure ShoreTel System*. The *ShoreTel System* dialog box appears.

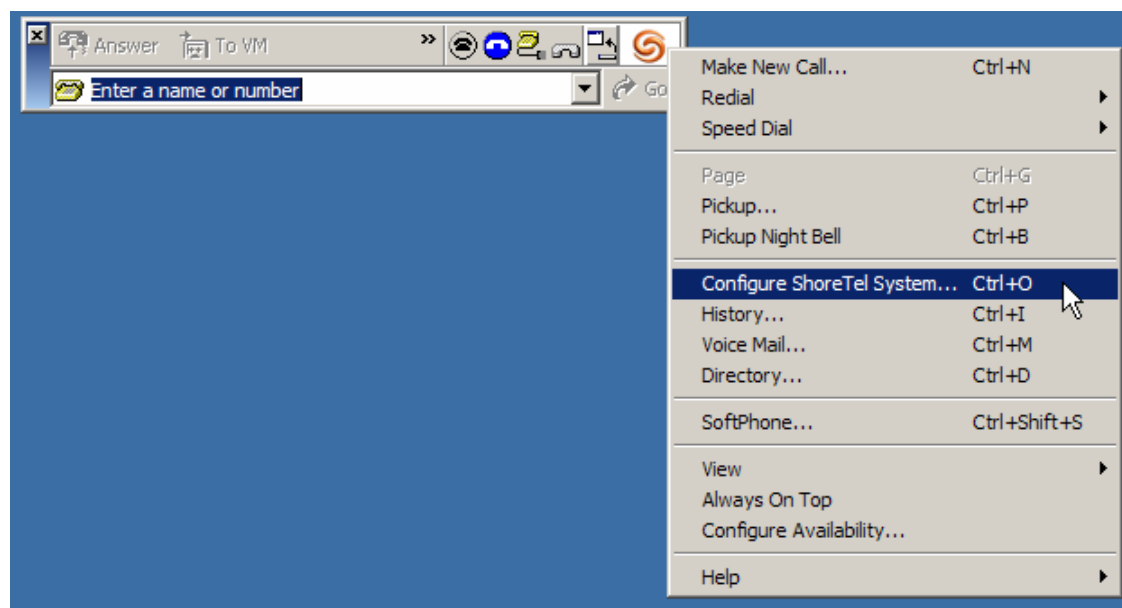


Figure 1.18 – Configure the ShoreTel System

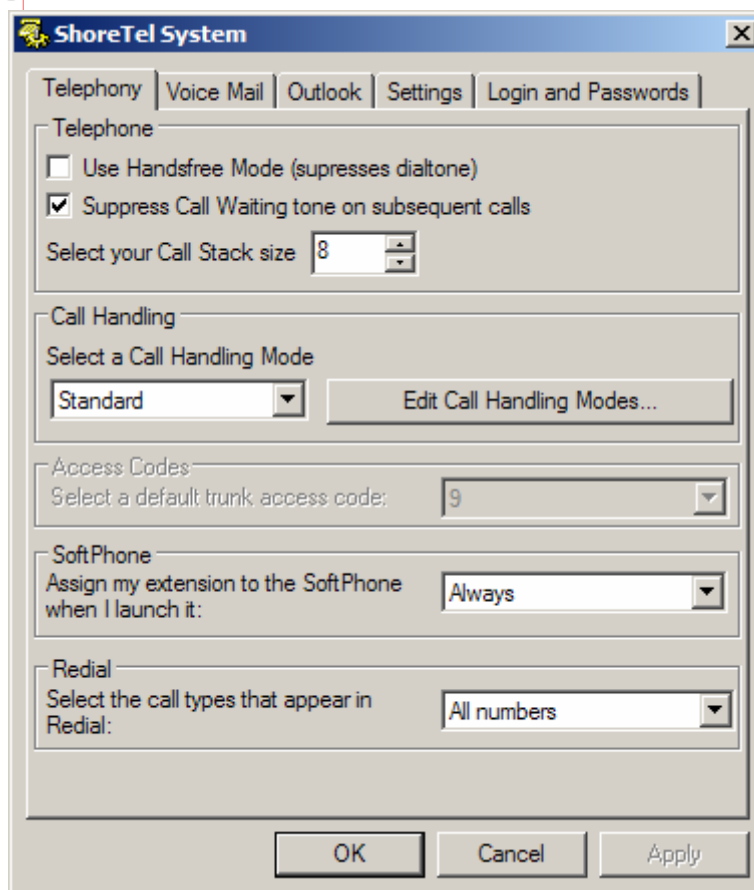


Figure 1.19 – Configure ShoreTel System - Telephony

Click the *Edit Call Handling Modes* button. The *Configure Call Handling* dialog box appears. Click the tab of the Call Handling Mode you want to configure. Select the desired options for the mode you are configuring.

- Call Forwarding Condition - specifies when your calls are forwarded. You can have your extension ring several times first or forward immediately.
- Call Forwarding Destination - specifies where the calls are forwarded. You can elect to forward directly to your voice mail (one of the extension choices in the drop-down menu), or to another extension, or to an external number. The current forwarding destinations are displayed. To edit the forwarding destinations, click *Edit Destination*.

Note: If you want to forward calls to an off-system extension (an extension in your company that is not on the ShoreTel System), type the extension number in the Number field. If the extension has not been set up as an off-system extension, you must enter the entire telephone number in the Number field. To determine if a non-ShoreTel extension is set up as an off-system extension, try dialing it from your telephone as an extension, or ask your system administrator.

- *Greeting* - designates the greeting that callers receive when they reach your voice mail. Each Call Handling Mode can have a different greeting.
- *Personal Assistant* - designates who is called if the caller presses 0 (zero) when listening to the voice mail greeting. Begin typing the name or extension of the desired personal assistant, and continue typing until the correct name and number appear.
- *Notification* - specifies whether notifications are sent to your pager or your phone when you get a new message. Note: You can set only one notification device (either your pager or your phone). You use this option to turn notification on and off.
- *Find Me* - enables Find Me call handling. You can configure up to two alternate numbers where callers who reach your voice mail box can try to find you. Click *Edit Find Me* to configure this option.
- *Notes* - only seen by the operator when monitoring your extension. Notes can be used to provide additional information, such as when you will return.
- Click *OK* twice to close the dialog boxes.

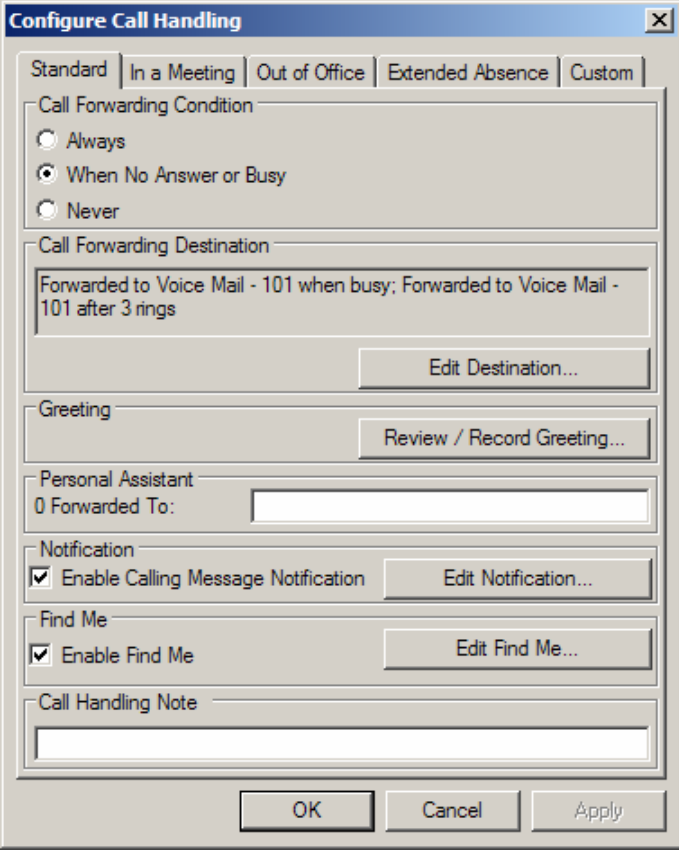


Figure 1.20 – Configure Call Handling

Recording Greetings for Call Handling Modes:

You can record specific greetings for each of the Call Handling Modes. If you record a greeting for only one of the modes, it is used only when call handling is set for that mode. When set for a mode without a greeting, the ShoreTel4 System announces your recorded name along with the standard greeting of that mode.

Right-click the ShoreTel icon, a shortcut menu appears. Click *Configure ShoreTel System*. The *ShoreTel System* dialog box appears. Click the *Edit Call Handling Modes* button. The *Configure Call Handling* dialog box appears. Click the tab of the Call Handling Mode you want to configure.

Click the *Review/Record Greeting* button. The *Prompt Recorder* dialog box appears. Click the *Record* button and record your message. Click *Stop* when you complete your message. Click *Play* to review your message. Click *OK* 3 times to close the dialog boxes.



Figure 1.21 – Record Greetings

Voice Mail Delivery and Notifications:

The User's voice mail notification options are edited by clicking on the *Edit Notification* button. Voice mail notification parameters specify what the user should do if notification is enabled at the time a message arrives. These options include email notification, telephone notification, pager notification and try options.

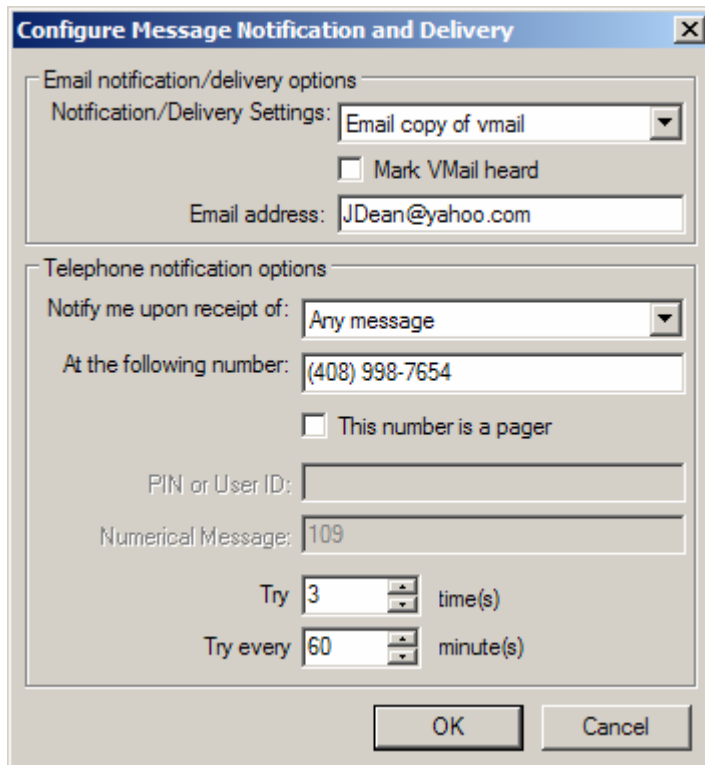


Figure 1.22 – Voice Mail Notification

Find Me Call Handling:

You can use Find Me call handling to allow callers who reach your voice mailbox to try and find you at alternate numbers by pressing “1” during your outgoing greeting. There is no prompt instructing the caller on this option. You must inform callers of this option in advance or in your recorded greeting.


When the callers press 1, they hear a prompt telling them that the Find Me destinations are being called. If the call is not accepted at either of the Find Me destinations, the call is sent to your voice mail.

You can specify up to two alternate numbers where you want callers to be able to find you. You must also set the number of rings (6 second intervals) that Find Me call handling will wait for an answer at each destination.

You can enable/disable Find Me call handling for each of the 5 call handling modes. When a call is forwarded to a Find Me destination, the phone at the Find Me destination displays the caller ID of the voice mail. When you answer the call, you hear a prompt announcing who the call is for and the original caller ID.

You are prompted with the following options:

- Press **1** to accept the call.
- Press **2** to send the call back to the original voice mail box.
- Press **3** to repeat the name and caller ID.

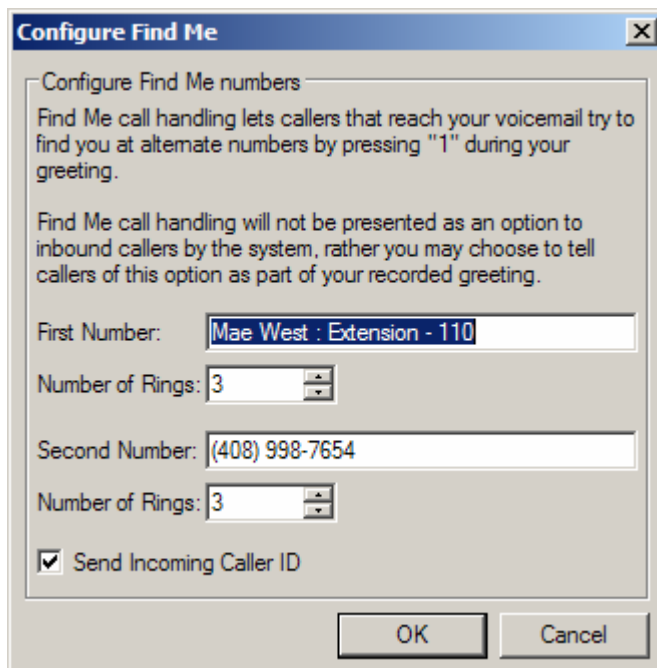

Configure Find Me

Configure Find Me numbers

Find Me call handling lets callers that reach your voicemail try to find you at alternate numbers by pressing "1" during your greeting.

Find Me call handling will not be presented as an option to inbound callers by the system, rather you may choose to tell callers of this option as part of your recorded greeting.

First Number:

Number of Rings:

Second Number:

Number of Rings:

☒ Send Incoming Caller ID

OK Cancel

Figure 1.23 – Find Me

Voice Mail Preferences:

Select the Voice Mail tab to set your voice mail preferences which include envelope information, playing & record .wav files through your PC, recording your name prompt which is used in the Auto Attendant “Dial by Name Directory” and your voice mail default greetings, along with shortcuts to set your notification settings and Find Me options.

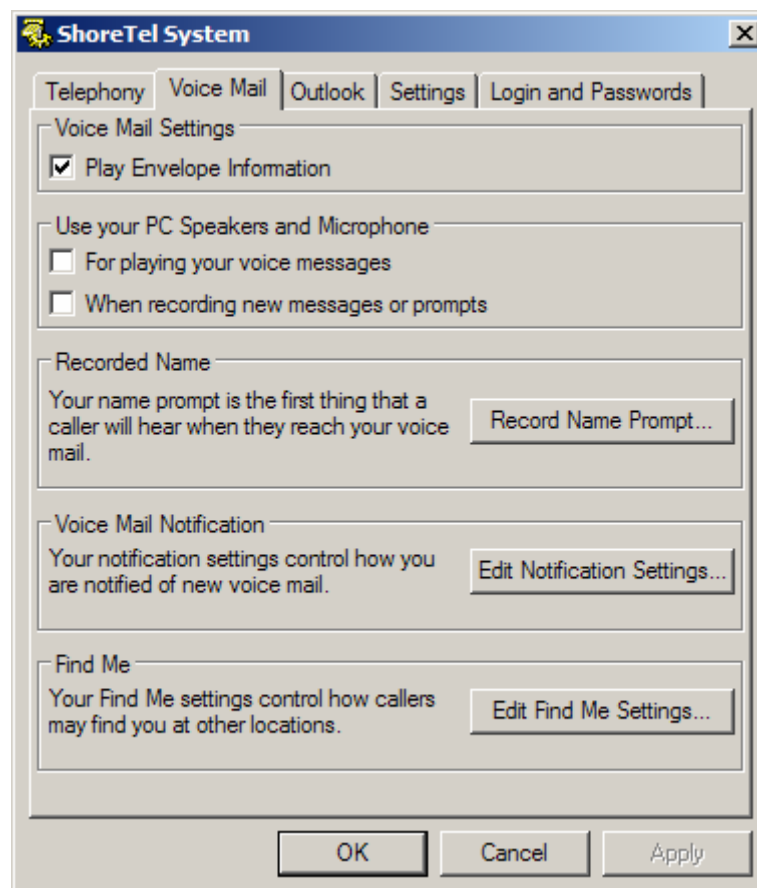


Figure 1.24 – Voice Mail Preferences

Outlook Integration

You can integrate Outlook to Call Manager in three areas: voice mail, call handling, and memorized phone number management. You can install these integrated components from the **Outlook** tab of the **ShoreTel System** dialog box.

Voice Mail Integration:

After you have installed voice mail integration, you have the option to:

- Use Outlook as the default voice mail client
- Attach voice mail to messages when moved
- Delete voice mail from messages when moved

Installing Automatic Call Handling:

Although the ShoreWare Call Manager installation installs the components for Microsoft Outlook integrated voice messaging; it does not install the components for the Microsoft Outlook Automated Call Handling feature. You install these components from the ShoreTel System control panel.

Memorized Phone Number Management:

You have the option of importing Outlook contacts to the Call Manager Quick Dial feature.

To set the option under Memorized Phone Number Management:

Step 1 In the **Memorized Phone Number Management** section, click **Read phone numbers from Outlook on startup** option.

Step 2 If you want to exclude FAX numbers from the search, click **Don't include FAX numbers**.

Step 3 If you want Outlook Contact to appear when you have an incoming call, click **Pop Outlook contacts on incoming call**.

Step 4 Click **More Options** to select which Outlook contacts to import. The MAPI Import Options dialog box appears.

Step 5 Click **Enable Disk Caching** if you want Outlook contacts to be

available without delay when Call Manager starts. When you have enabled disk caching, you can set when Call Manager imports contacts. If disk caching is not enabled, Call Manager imports contacts every time it starts.

Step 6 Click the **Import Configurator** tab.

Step 7 Click the locations where you want Call Manager to search for contact information.

To select individual folders, click **Details** and check the folders you want searched for contact information.

Step 8 Click **OK**.

Step 9 If you want to import contacts now, return to the **Disk Cache Options** tab and click **Read Contacts Now**.

Note: If you do not click this button, the Outlook contacts will be imported the next time you start Call Manager.

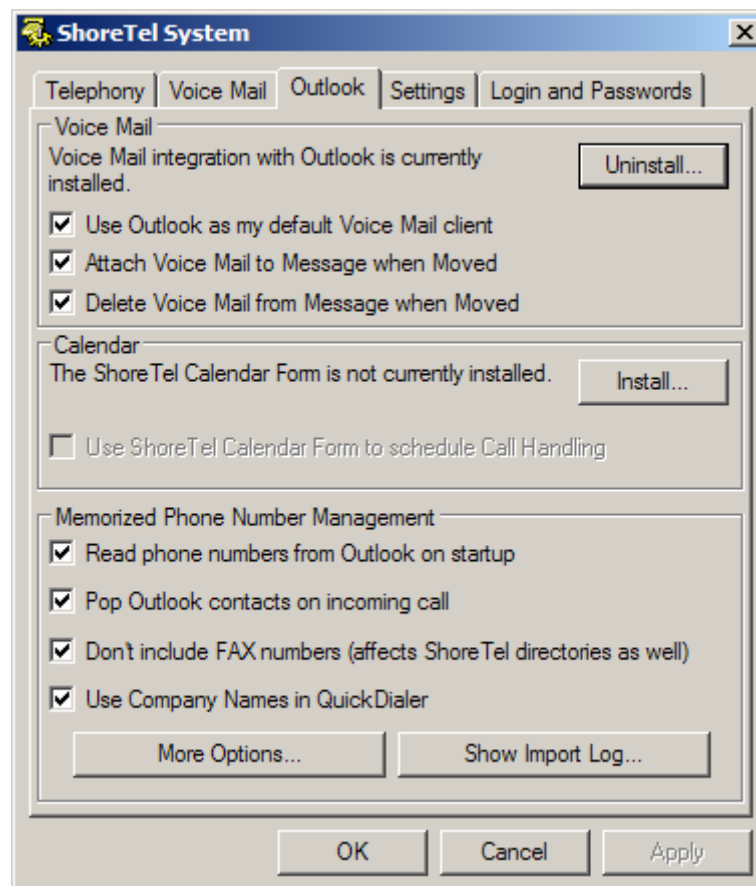


Figure 1.25 – Outlook Integration

Getting Warnings in Nonstandard Modes:

You can configure Call Manager to warn you on start up if you are not in the Standard Call Handling Mode.

Right-click the ShoreTel icon, a shortcut menu appears. Click *Configure ShoreTel System*. The ShoreTel System dialog box appears. Click the *Settings* tab. In the On Startup section, select the Warn when not using Standard Call Handling. Click OK to close the dialog box.

The next time you start Call Manager and it is not in the Standard Call Handling Mode, a message appears asking if you want to switch to Standard Mode.

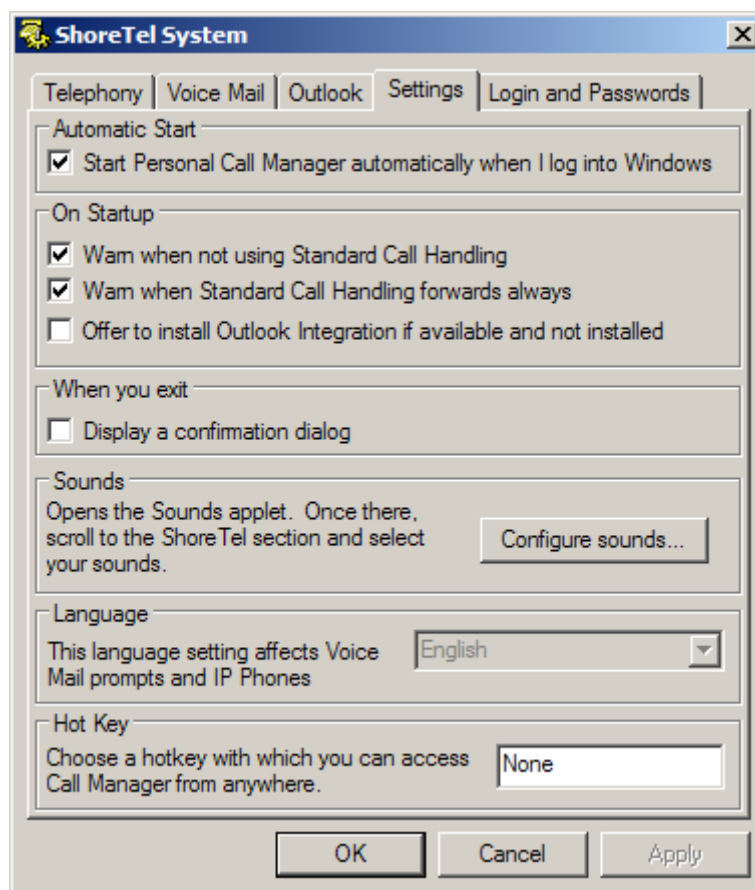


Figure 1.26 – Settings

Changing the Login ID

You can change the Call Manager Login information (user name and server name) in the ShoreTel System dialog box.

Note: Changes should be made only if directed by your system administrator.

To change the Login information from within Call Manager Right-click the ShoreTel icon. A shortcut menu appears. Click *Configure ShoreTel System*. The ShoreTel System dialog box appears. Click the Login and Passwords tab. Click *Change Login Information*. The Login Editor dialog box appears.

Change the user name or server name in the appropriate boxes. Click *OK* twice to apply these changes. To change the Login information if you cannot open Call Manager on your computer, click *Start*, click *Settings*, and click *Control Panel*. Double-click the ShoreTel System icon. The ShoreTel Dialog box appears.

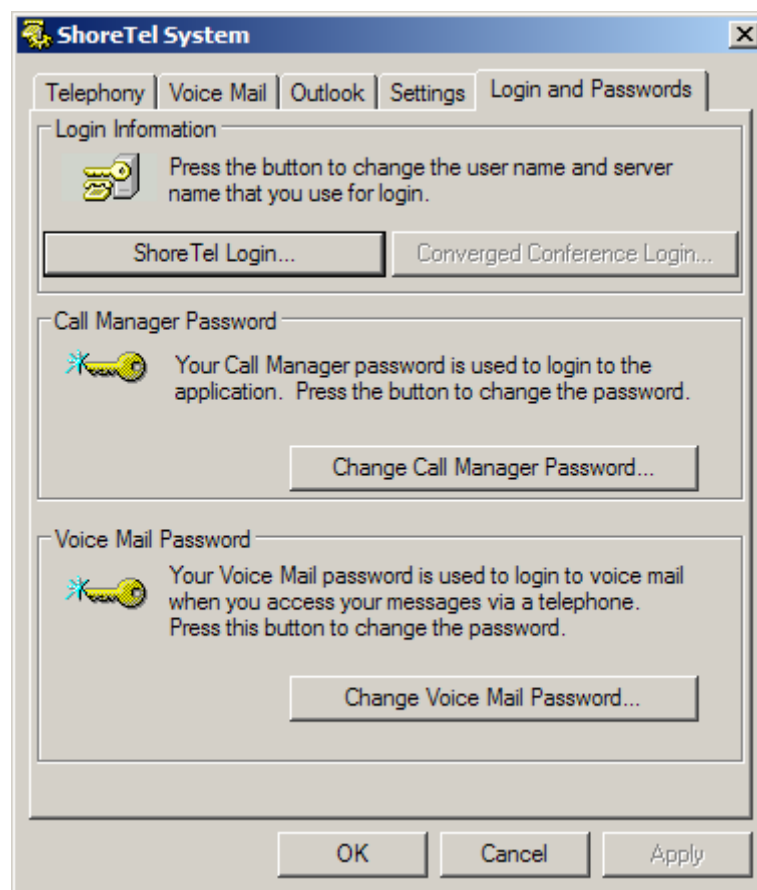


Figure 1.27 – Login & Passwords

Call Pick Up Using Call Manager

Call Pickup is useful if you need to answer another ringing phone.

Note: Your System Administrator must configure your extension to be able to use the Pickup feature.

To pick up a ringing phone, right-click the ShoreTel icon. A shortcut menu appears. The Pickup Ringing or Parked Call on Extension dialog box appears. Click *Pickup*. In the QuickDialer, type the user's name (or the number) of the ringing phone you want to pick up. QuickDialer displays a list of active calls. Select the call you want to pick up when it appears. Unpark transfers the parked call to your extension. If your receiver is on the hook, your phone rings and the *Active Call* list displays the call status On-Hook pickup and the On-Hook icon. Answer the phone. You are connected to the call. The call status in the *Active Call* list display changes to Connected and the Connected icon appears.

Close On Action will automatically close this dialog box when the selected number has been picked up.

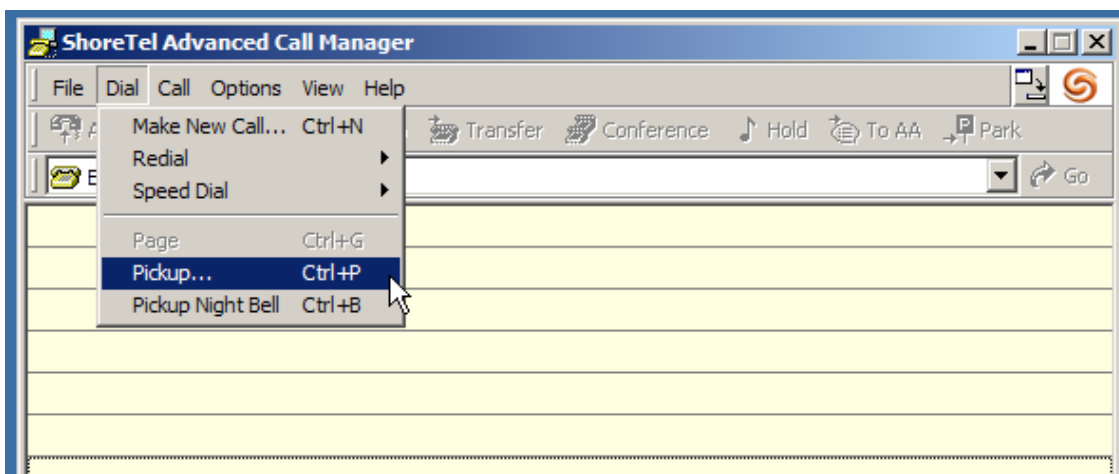


Figure 1.28 – Call Pickup

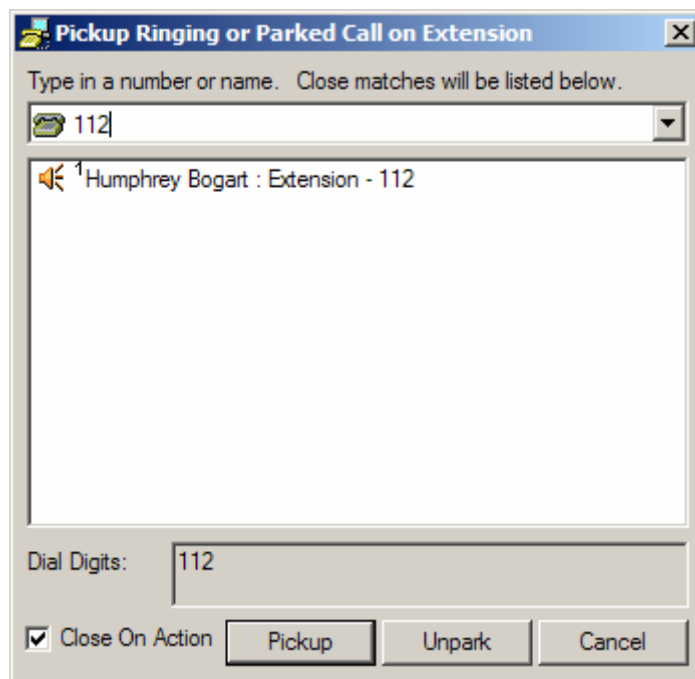


Figure 1.29 – Call Pickup Dialog Box

AnyPhone Feature

The AnyPhone feature allows you to receive calls and log on to your voice mail from any phone connected to the ShoreTel System. To find out if you have AnyPhone access, contact your System Administrator.

You activate the AnyPhone feature from a system telephone, temporarily reassigning your home extension and voice mail to a different extension in the ShoreTel System.

The easiest way to reassign your extension to your home port is to click *Go Home* on the File menu in the Call Manager.

To assign your extension to a system phone, log on to voice mail from any ShoreTel System phone.

- To change mailbox options, press 7.
- To reassign your extension, press 3.
- To assign your extension to the telephone you are calling from, press 1. The phone you are calling from becomes your current extension and you can check your voice mail from this phone. Also, your calls will ring at this new phone. Your previous phone becomes unassigned and will not ring until you reassign it.

- To unassign your extension, press 2; your "home" phone becomes your extension again.

Note: If another user is assigned to your home telephone, your extension is assigned to the SoftSwitch until your home telephone becomes available. You can “override” the other user from your home telephone by re-assigning their extension to their home telephone.

Speed Dialing

Adding Speed Dial Entries:

Your speed-dialing list can contain up to 20 entries. To add or edit a number in the Speed Dial list, right-click the ShoreTel icon. A shortcut menu appears, click Speed Dial and click *Configure Speed Dial*. The Configure Speed Dial dialog box appears. Click the *Add* button to add an entry and the Add New Speed Dial dialog box appears, or select the name with the label you want to edit, and click the *Edit Label* to modify an existing entry.

Type in the name or number you want to add to the speed dial. As you type, any matches display in the box below. If the number you want appears in the match list, select the name or number you want to add. If it is not available in the match list, you can type the number. Assign the number a name in the Label box. Click *OK*. The Configure Speed Dial dialog box appears and the name is added to the list.

Dialing from Your Speed Dial List:

You can quickly call a phone number using speed dialing. To make a Speed Dial call, right-click the ShoreTel icon, a shortcut menu appears. If you have configured your Speed Dial numbers, point to Speed Dial. A list of numbers appears. Click the number that you want to dial. Call Manager dials the number. Speed dial numbers can also be programmed to appear on your telephone.

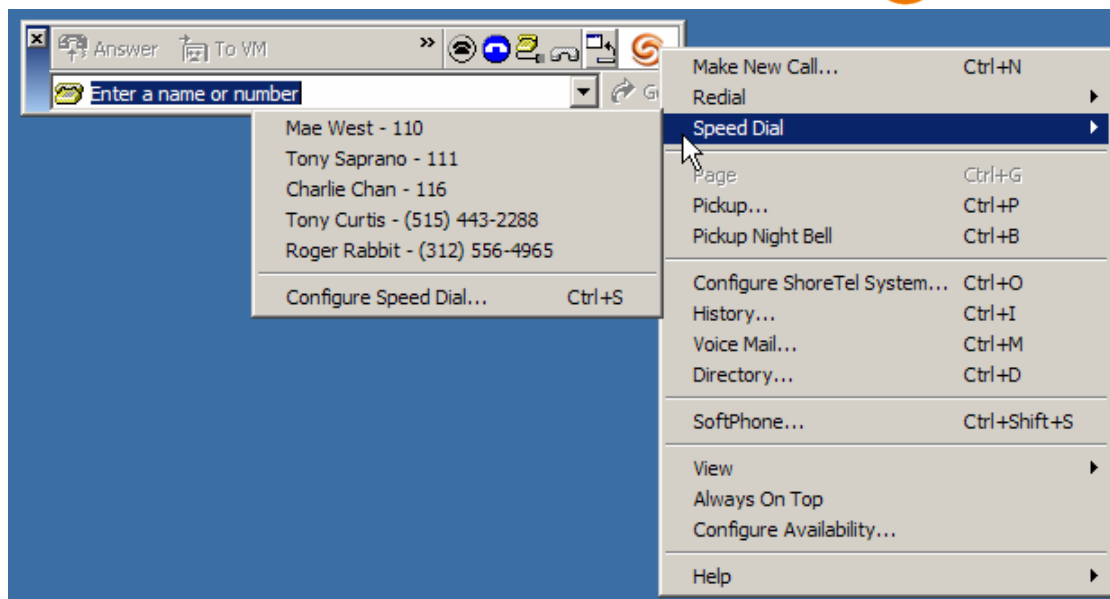


Figure 1.30 – Configure Speed Dial

Configuring the Call Stack

The call stack size determines the number of calls you can receive before the next call is treated as busy.

Even when your call stack is full, Call Manager lets you place one more outgoing call to perform a consultation, or conference, or a transfer.

To configure your call stack size, right-click the ShoreTel icon. A shortcut menu appears. Click *Configure ShoreTel System*. The ShoreTel System dialog box appears. Click the *Telephony* tab. In the Telephone section, type the stack size in the Select your Call Stack size box. Click *OK* to close the dialog box.

Note: Your call stack size cannot exceed the number configured by your System Administrator. Consult your System Administrator if you need to increase your call stack size beyond its current limit.

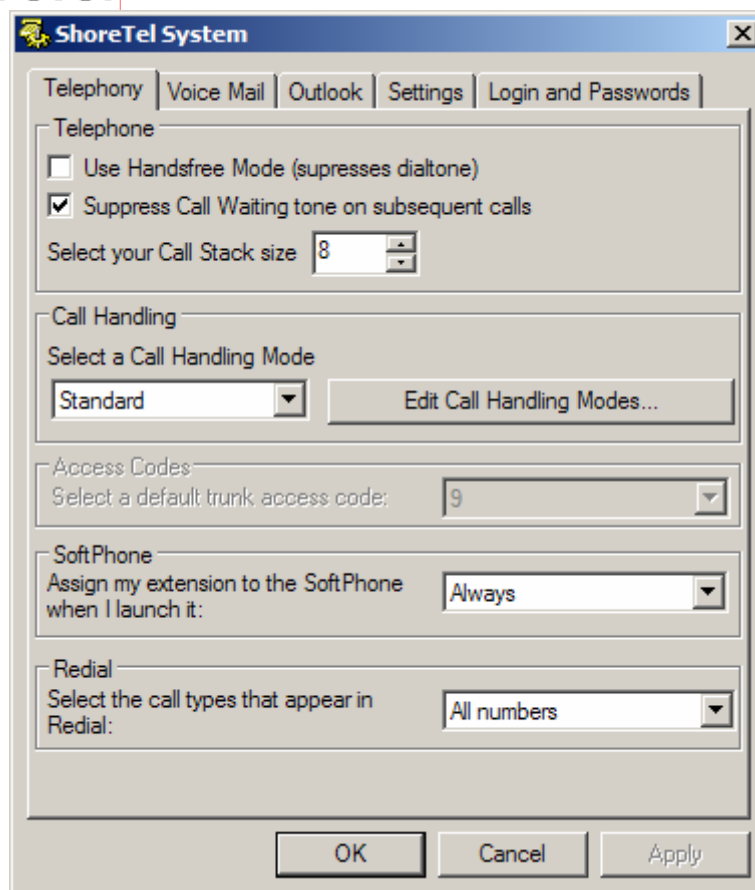


Figure 1.31 – Configure Call Stack

Introduction

Soft Phone is available feature in the Call Manager software with an additional license. SoftPhone installs automatically with the Call Manager client and your extension is automatically assigned to the SoftPhone when you start it.

The Web Client allows users to manager their personal feature preferences through a browser. This is a great application for those users who will not have access to the Call Manager software or who do not have a Windows PC, like Mac users.

This lesson covers the features and functions of the ShoreWare SoftPhone and web Client applications.



Objectives

At the end of this lesson you will:

- Configure your SoftPhone.
- Use your SoftPhone features.
- Access the web client.
- Use the web client features.



Resources

- *System Administration Guide*
- *Planning and Installation Guide*

SoftPhone

SoftPhone is an available Call Manager feature for licensed users. To provide a user with Soft Phone, you must obtain a keyed Soft Phone license and enable *Soft Phone* use from the User edit screen in ShoreWare Director. Soft Phone installs automatically with the Call Manager client and your extension can be automatically assigned to the Soft Phone when you start it.

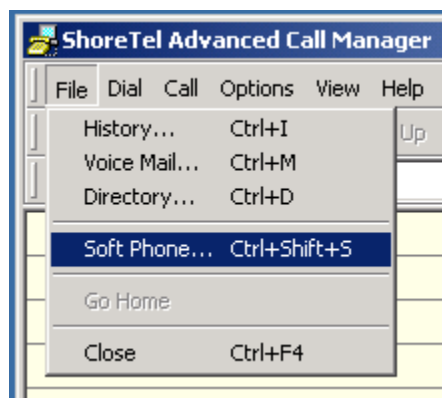


Figure 2.1 – Launch the SoftPhone



Figure 2.2 – Soft Phone

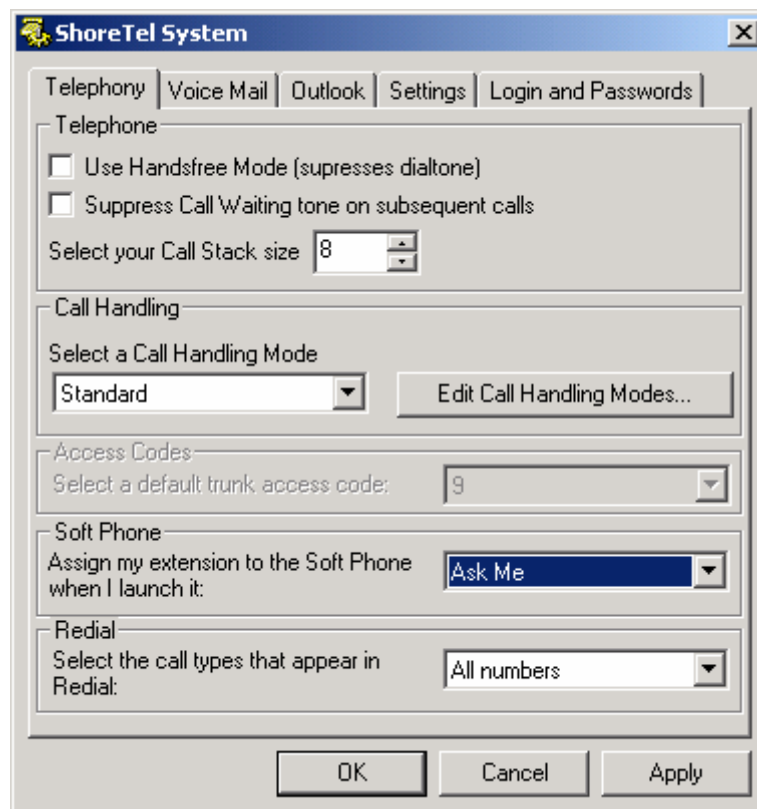


Figure 2.3 – Soft Phone ShoreTel Control Panel

While the Soft Phone can be configured for different types of audio endpoints (headset, speakers, handset), ShoreTel recommends a USB headset be used for supportable voice quality.

Soft Phone supports Flash and Mute functions. The Soft Phone Flash provides the same functions as the analog ShorePhones. To mute a call, click *Mute*. Click *Mute* again to restore voice.

Once you have activated the Soft Phone through ShoreWare Director, you should set the Soft Phone options.

To set the Soft Phone options: These options should not be touched unless there is a need to troubleshoot problems

- Launch the Soft Phone from Call Manager.
- Click *Options*. The *MGCP* tab of the Soft Phone Configuration dialog box appears.
- The *End Point Name* is the read-only MGCP end point identifier. This is the identifier that appears on the IP phone list in ShoreWare Director.

- Click the *Audio tab*. The Audio tab appears as shown below.

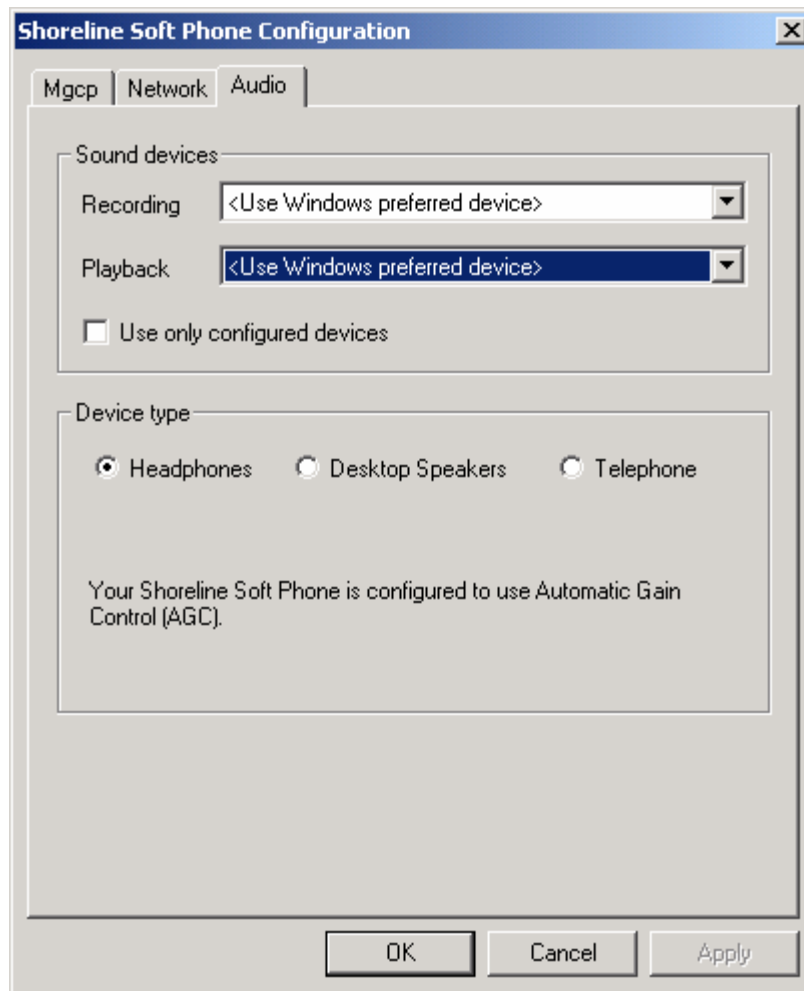


Figure 2.4 – Audio Tab

Recording - Select the device used for recording from the Recording drop-down list.

Playback - Click the device used for playback from the Playback drop-down list.

Use only configured devices – Check if you do not want Soft Phone to use any Windows preferred audio devices. Select 1 of 3 device types; Headphones, Desktop Speakers, or Telephone. Click *OK*.

To start Soft Phone: Right-click the ShoreTel icon, a shortcut menu appears. Click *Soft Phone*. The Soft Phone appears on your desktop.

With Soft Phone you can perform the following basic phone functions:

- *Dialing from Soft Phone* - You can use either your mouse or keyboard.
- *Using the mouse and cursor*—Click the numbers you want to dial. To correct mistakes, select the incorrect number(s) with the cursor and retype the correct numbers. To dial the number, click *Talk*.
- *Using the keyboard*—Type the number you want to dial from the keyboard. To correct mistakes, use the backspace or delete keys. To dial the number, press Enter on the keyboard.
- *From Call Manager* – You can also place Soft Phone calls from Call Manager just as you would with an analog or IP Phone. To place Soft Phone calls from Call Manager, you must first take the Soft Phone off-hook. If you try to place a call from Call Manager while the Soft Phone is on-hook, you will hear ring-back to alert you that the Soft Phone is still on-hook. Also, you can use Handsfree Mode to suppress the dial tone on the Soft Phone.

Handling Calls

The SoftPhone features allow you to handle calls quickly and efficiently.

Receiving Calls:

To receive a call, click *Talk* on the Soft Phone or press Enter from the keyboard. The Soft Phone does not have an auto-off-hook feature. To achieve this, set your Call Manager to handsfree mode. If you are already off-hook, you can press the Answer button in the Call Manager.

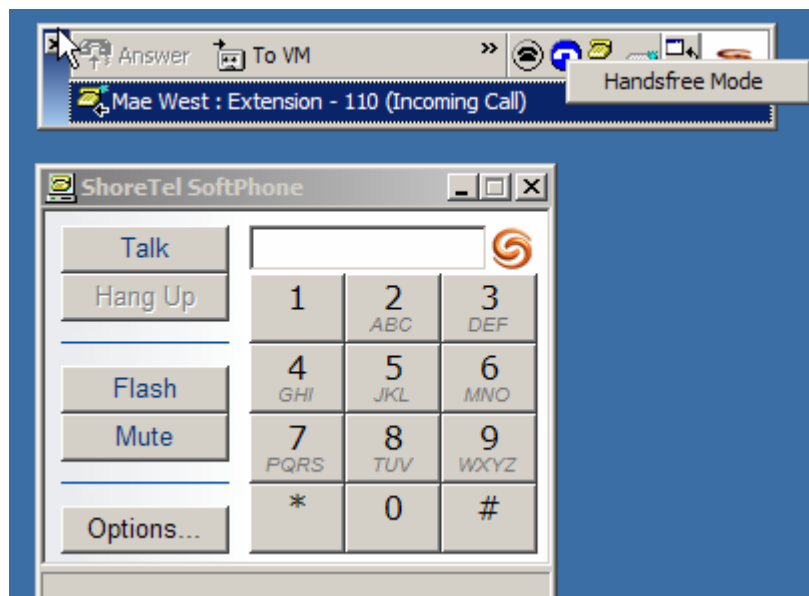


Figure 2.5 – Soft Phone Answer

Call Waiting:

If you are enabled for call waiting and hear the call waiting tone, press Flash to answer the second call. The first call is automatically placed on hold. To return to the first call, press Flash again.

Placing a Call on Hold:

To put a call on hold, press Flash and replace the handset. To return to the call, pick up the handset. (While a call is on hold, your phone rings intermittently as a reminder that a caller is waiting.)

Transferring a Call:

To transfer a call, press Flash and wait for dial tone. Dial a number and listen for ring-back tone.

To blind transfer, hang up upon hearing the ring back tone or to announce the transfer, wait for the party to answer. (Your original call is placed on hold during consultation.) After consulting with the third party, hang up your handset to complete the transfer and end your original call.

Making a Conference Call:

To conference a third party into a call, press Flash and wait for dial tone. Dial the number and wait for the ring back-tone.

To add the third party, press Flash upon hearing the ring back tone, or to consult with the recipient before adding them into the conference, wait for the party to answer before pressing Flash. (Your original call is placed on hold during consultation.) After consulting with the third party, press Flash to initiate the conference call.

After the conference call is in progress, drop the last person added press the Flash button.

Managing Soft Phone calls via Call Manager

From Call Manager, activate Handsfree Mode and you can manage Soft Phone calls via Call Manager like any other call – including Hold, Transfer, Conference, and Hang Up.

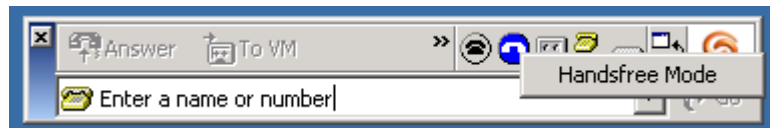


Figure 2.6 – Handsfree Mode

Web Access

Web Client is a browser-based interface that allows users to change their call handling mode and personal options. Mobile users can change their call handling options from any computer connected to the intranet or Internet. Web Access can be a public URL for remote access or restricted to the WAN.

To open ShoreTel Web Access:

Step 1: Open your browser.

http://<servername (or IP address)>/shorewarewebclient in the URL address text box, where <servername> is the name or IP address of your ShoreTel server.

Step 2: Press Enter. The Web Access login page appears in your browser.



Figure 2.7 – Web Client Login Screen



Figure 2.8 – Web Client

The Web Client allows you to activate a Call Handling Mode or change your personal settings:

- Call Handling Settings like forwarding destinations and Personal Assistant.
- Voice Mail Notification like email notification or phone notification

- Find Me destinations
- Other settings like your PCM and Voice Mail passwords.

Note: if you have Delegation permission, under the “other” tab is where you would be able to activate the Call Handling Mode for another user’s extension.

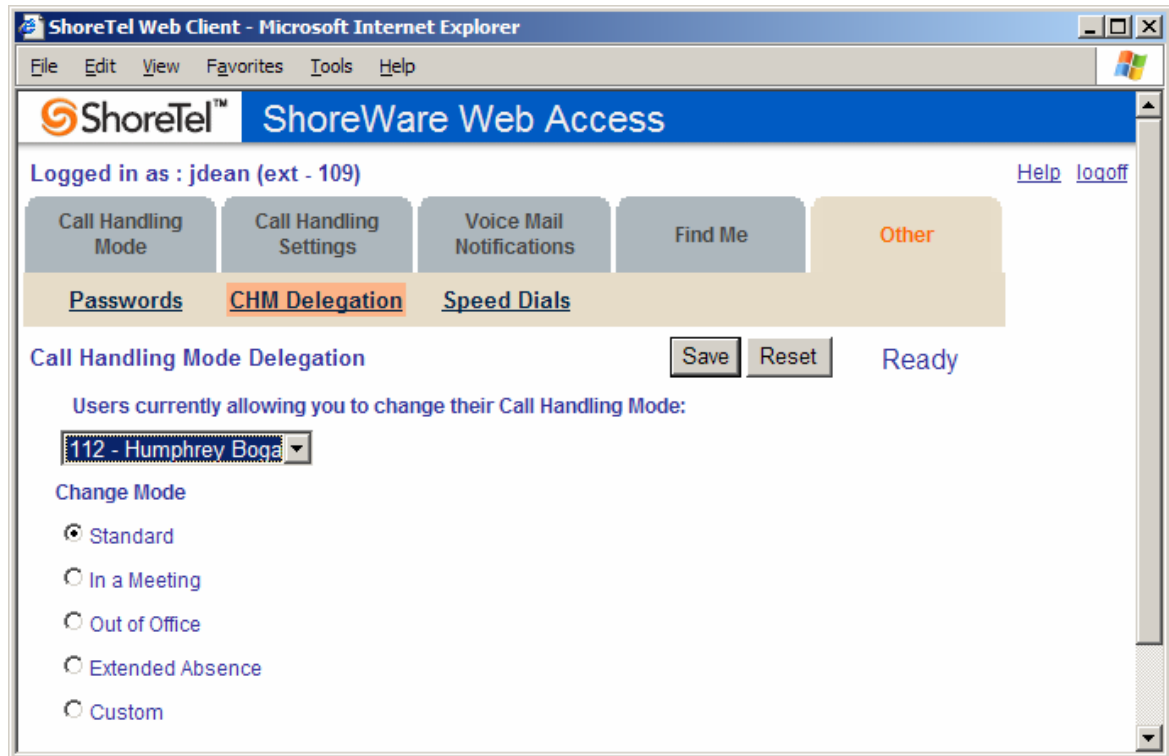


Figure 2.9 – Web Client - Delegation

Lesson 3:

Workgroup Call Manager

Introduction

The Workgroup Call Manager provides users with an all-purpose tool for managing telephone operations and enables instant productivity. The Workgroup Call Manager makes every phone a multi-line phone, allowing the user to virtually manage up to a maximum of 16 calls simultaneously.

The Workgroup Call Manager contains the Agent monitor used by supervisors and the queue monitor used by supervisors and agents in the workgroup.

This lesson covers the features and functions of the Workgroup Call Manager software.



Objectives

At the end of this lesson you will:

- Use Workgroup Call Manager to Log into and out of a Workgroup
- Use the Queue Monitor.
- Use the Agent Monitor.
- Use the ShoreTel Voice Mail Viewer.



Resources

- *System Administration Guide*

Workgroup Call Manager

The Workgroup Call Manager gives users an all-purpose tool for managing telephone operations. When receiving an inbound call, detailed information including caller name, number, trunk-identification and routing history is presented. This allows professional call handling.

An intuitive point-and click interface gives quick access to commonly-used features such as transfer and conference. In addition, the Workgroup Call Manager makes every phone a multi-line phone, allowing the user to visually manage up to a maximum of 16 calls simultaneously.

The Workgroup Call Manager includes:

Agent Call Manager – Intended for workgroup agents providing complete login and logout capabilities. Everyone in the workgroup also has access to the Workgroup Queue Monitor and the ShoreTel Voice Mail Viewer.

Workgroup Supervisor Call Manager – Designed for use by supervisory personnel and provides real-time monitoring of agents and their call activity. Everyone in the workgroup also has access to the Workgroup Queue Monitor and the ShoreTel Voice Mail Viewer.

Agent Call Manager

The Agent Call Manager provides login and logout capabilities. Everyone in the workgroup also has access to the Workgroup Queue Monitor, which provides real-time updates on waiting callers.

The Agent Call Manager can be viewed in compact, detailed or docked views.

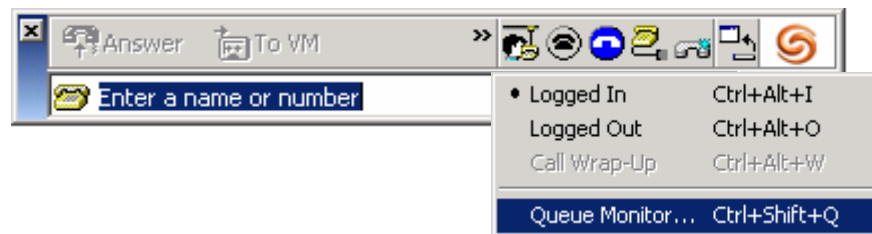


Figure 3.1 – Workgroup Agent Call Manager

Workgroup Queue Monitor

The Workgroup Queue Monitor displays real-time information on waiting callers. Information on the inbound calls includes: caller name, number, trunk-identification and routing history.

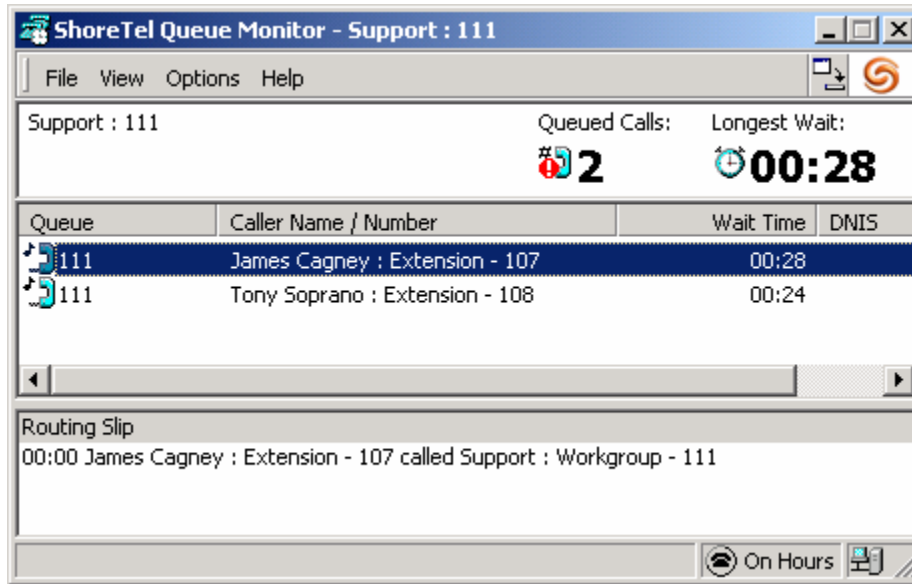


Figure 3.2 – Workgroup Queue Monitor

Agents are also alerted when thresholds for wait time and number of callers waiting has been exceeded. If the Agent has permission, they can pickup calls directly from queue, irrespective of the caller's position in the queue.

Workgroup supervisors can set alert thresholds for maximum wait time and number of callers waiting. Supervisors can change the workgroup call handling parameters as needed by activating a pre-set schedule.

Workgroup Voice Mailboxes can also be created. These mailboxes are only accessible from the Voice Mail Viewer even if the agent has installed Outlook Integration. (Only personal VM will appear in Outlook.)

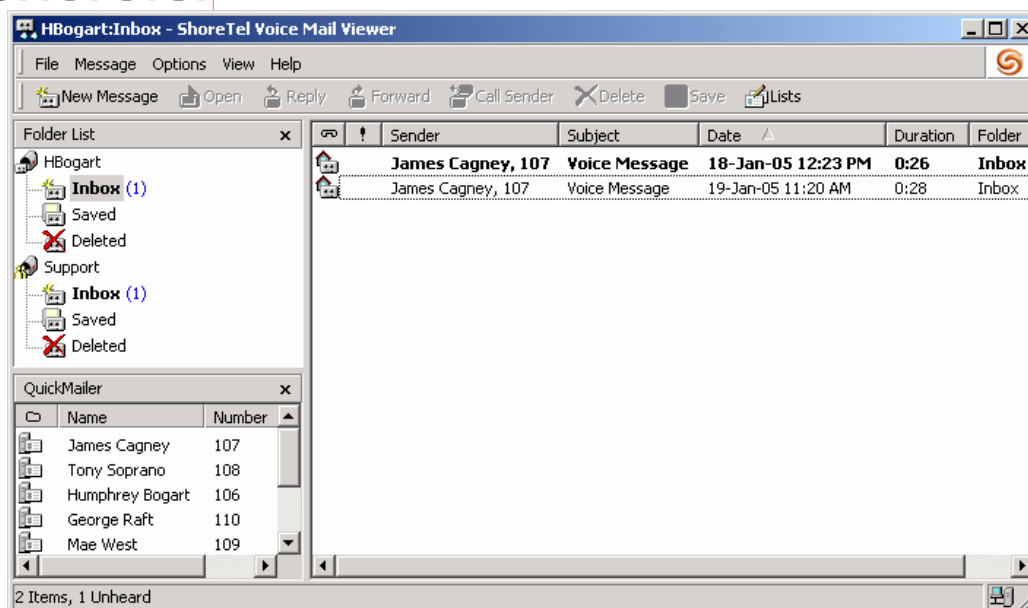


Figure 3.3 – ShoreTel Voice Mail Viewer

Agent Monitor

The Agent Monitor is designed for supervisors so that they can monitor their agents in real-time.

With the Agent Monitor, designated supervisors can view the status of each agent, including caller information, agent login and logout states and wrap-up status. Supervisors can also change the state of each agent, or use the Silent Monitoring, Barge In, and Call Record features.



Figure 3.4 – Agent Monitor

Lesson 4: Operator Call Manager

Introduction

The Operator Call Manager provides operators and administrative assistants with real-time information about every user on the system so that they can make decisions on where to route callers.

This lesson covers the features and functions of the Operator Call Manager software.



Objectives

At the end of this lesson you will:

- Use the Operator Call Manager
- Use the Extension Monitor



Resources

- *System Administration Guide*

Operator Call Manager

The Operator Call Manager has been designed specifically for the needs of operators and executive assistants. Real-time information is provided about every user on the system as calls are placed to them or transferred to them.

The Operator Call Manager provides instant access to call status, call handling mode, and call notes for every user enabling professional, accurate call answering. In high call volume applications, operators will appreciate the "Handsfree Mode" feature used in conjunction with a headset as well as keyboard shortcuts for fast, efficient call handling. Executive assistants will benefit from the information provided on selected users on the system. An extension monitor with multiple docking options provides a virtual "Busy Lamp Field" delivering more features and more functionality than proprietary hardware solutions.

Note: If an operator is assigned to a workgroup then the Operator Call Manager includes all the features of the Workgroup Supervisor Client.

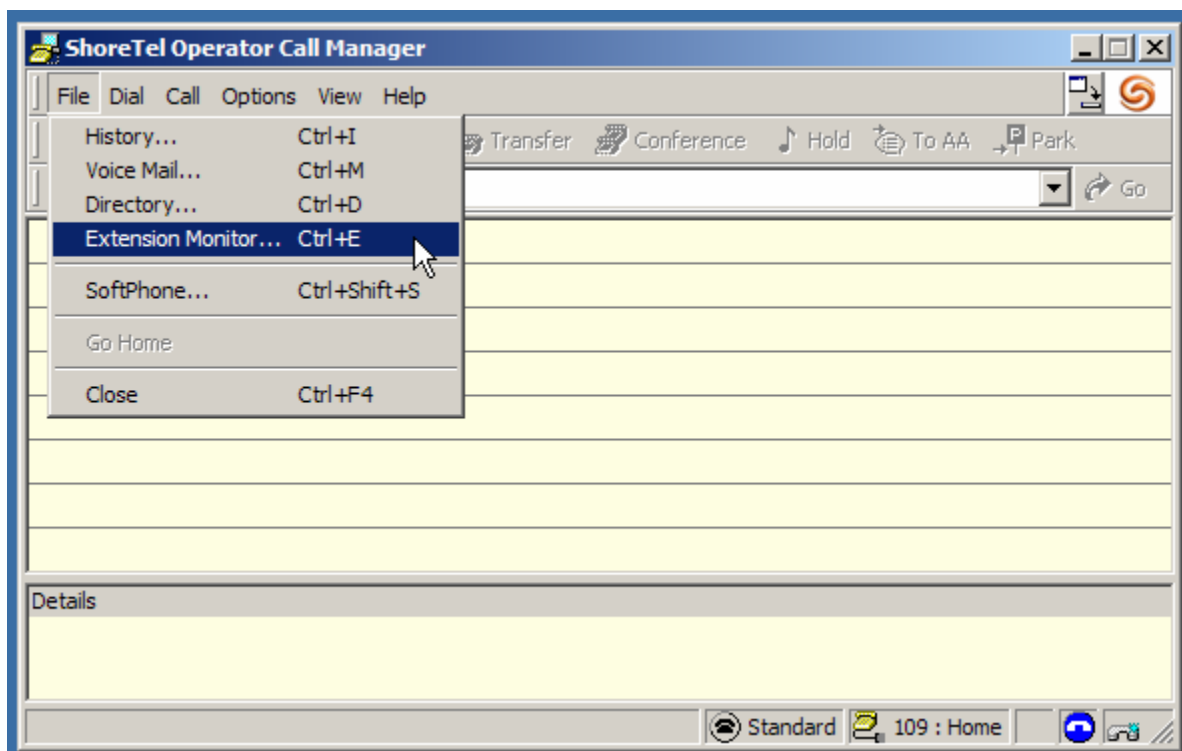


Figure 4.1 – Operator Call Manager

Operators and Executive Assistants can select up to 250 system extensions they want monitor “real-time”. Just check the box next to each extension you want to monitor.

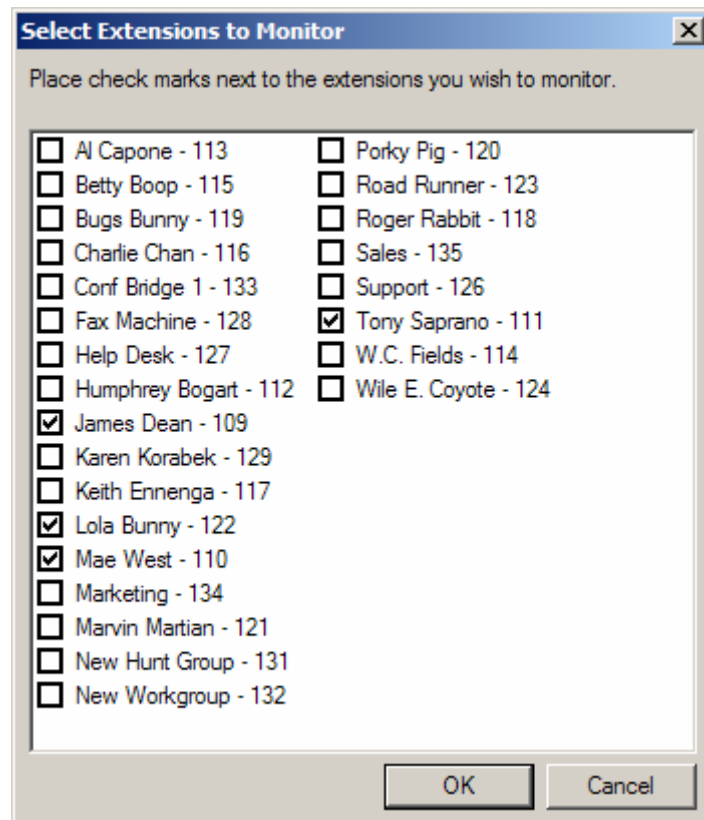


Figure 4.2 – System Extension Directory List

Selected extensions automatically appear in the Extension Monitor window. You can see “real-time” call activity to each extension and have instant access to call control activities like Call Pickup, Dial, Intercom, Whisper Page, and Silent Monitor & Barge In. Additionally you may transfer calls from your extension to any of these monitored extensions using a “drag & drop” between windows.

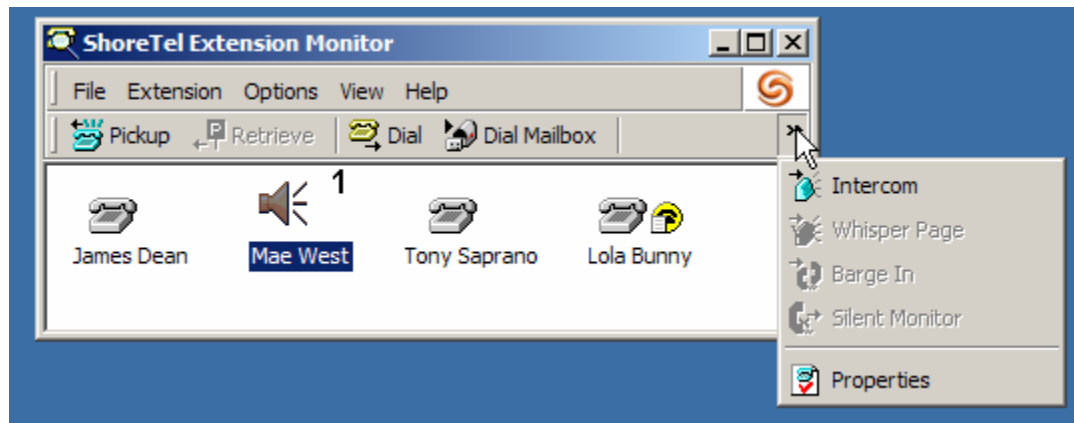


Figure 4.3 – Extension Monitor

APPENDIX:

Things to Remember Lab Exercises



Things to Remember

- Personal Call Manager makes every phone a multi-line phone, allowing the user to visually manage up to 16 calls simultaneously.
- Every user on the system has 5 call handling modes providing a wide array of call forwarding and personal greeting options.
- Call Manager can be viewed in 3 different modes: Compact View, Detailed View, Docked View
- The *QuickDialer* gives you a way to quickly make phone calls without picking up the phone and dialing the number yourself.
- Current calls appear in the *Active Call* list.
- The *History Viewer* allows you to quickly view inbound and outbound call information, including phone number, caller ID, time, date, and call duration.
- How you hang-up a call depends on the mode in which you answer the call.
- The AnyPhone feature allows you to receive calls and log into your voice mail from any phone connected to the ShoreTel System.
- The speed-dialing list can contain up to 20 entries.
- The call-stack size determines the number of calls you can receive before the next call is treated as busy.
- You can change the Call Manager Login Information in the ShoreTel System dialog box.
- The ShoreTel SoftPhone is an available feature for licensed users and install automatically with the Call Manager software.
- The ShoreTel Web Client is a browser-based interface that allows users to change their call handling mode and personal options.
- The Agent Call Manager provides complete login, logout, and queue monitoring.

- Agents can be alerted when thresholds for wait-time and number of callers waiting are exceeded.
- The Workgroup Voice Mailbox is only accessible from the Voice Mail viewer. Only personal voice mail messages appear in Outlook.
- If given permission, agents can pickup calls directly from queue, irrespective of the caller's position in the queue.
- The Workgroup Supervisor Call Manager allows real-time monitoring of agents and provides caller information, agent login and logout state and wrap-up status.
- Supervisors can set alert thresholds for maximum wait time and number of callers in queue.
- Supervisors can change the state of each agent and workgroup call handling parameters as needed.
- Supervisors can activate the Silent Monitoring, Barge In, and Call Record features using the Agent Monitor window.
- Operators, using the Operator Call Manager, can instantly access call status, call handling modes, and call notes for every user on the system to route calls more professionally and quickly.
- Operators can use the "Hands Free" mode with a headset and keyboard shortcuts.
- If an operator is assigned to a workgroup then the Operator Call Manager includes all the features of the Workgroup Supervisor Client.



Lab 1 – Using the Personal Call Manager

As a team or as individuals, use the Personal Call Manager (PCM) software to perform the following:



Resource Materials

- *System Administration Guide*
- *Planning and Installation Guide*
- *The Telephone User Interface Guide*

Launch

Launch the Personal Call Manager (PCM).

Call Control

Make call - From the QuickDialer, dial another extension by typing a partial name.

Take call - From another extension, call another extension and have them answer the call.

Conference – Have students in the group setup up a 3 party conference. During the conference, drop one of the parties

Docking Options - Try out the different docking options and views.

Continue making, taking and transferring calls until students are comfortable with the interface.

Configure ShoreTel System / Call Handling Modes

Greeting – Record the personal greeting in the standard call handling mode.

Phone Message Notification – Set up message notification such that if you get an urgent message, another extension will ring and play the message. Test this.

Email Message Notification – Set up email notification to send you an email at your personal email account like Yahoo or AOL.

Find Me – Configure Find Me destinations. Test this.

History Viewer

Call back – Open the History Viewer and call back someone.

Properties – Take a look at the properties of a call, add a note, and review the routing slip.

Directory Viewer

View – View the system directory.

Outlook integration

Contacts

- *Dialing* - Use the QuickDialer to dial a contact in Outlook.
- *Screen pop* – Configure your desktop to pop Outlook Contacts.

Voice Mail

- *Take message* – Receive a call. Check “To Voice Mail” to redirect inbound call immediately.
- *Play* – Play the message over the telephone or PC speakers.
- Forward message to an email as well as voice mail address.

Calendar

- Configure the calendar for integration. Create an appointment in Outlook and select “In A Meeting” for the Call Handling Mode option. Call your extension and test this.

Anyphone



Exchange extensions with someone else in the group. Configure this phone as your extension.

Note: login procedure from the new phone location: press #,#, then enter your extension number, then the VM password, then dial slowly 7,3,1 to assign your extension to this new phone.

Call your extension. What happens?

Send yourself back to your home switch port.

- Using the Personal Call Manager (PCM) click the yellow telephone icon in lower right hand corner of PCM.
- Using the Telephone User Interface log into VM and dial slowly 7,3,2.

Soft Phone.

Launch the Soft Phone: from the PCM RIGHT mouse Click the ShoreTel logo and select Soft Phone.

- Configure the Soft Phone OPTIONS
- Plug in a USB headset and place a call. Did it work?
- Now click the TALK button (so you hear a dial tone) in the Soft Phone and then minimize the Soft Phone window (do not close the application).
- From PCM activate Handsfree Mode. Your headset is now live & off-hook so you can do all your dialing through PCM. Place a call, did it work?

Web Client

From Desktop or Laptop open Internet Explorer Browser

Access the Web Client using the following URL:

<http://<server name or IP Address of the ShoreTel Server>/ShoreWareWebclient>

- Log in and check out the various options available to you.

Note: this would be useful for people who travel or do not have a Windows PC to run PCM.



Lab 2 – Using the Workgroup Call Manager

Workgroup Agent and Supervisor Call Manager

Launch the Workgroup Supervisor Call Manager.

Bring up the Agent Monitor Window:

- Login and logout agents from the Agent Monitor window.
- Make a call to the workgroup and do a call pickup from the Agent Monitor.
- Transfer the call back to the agent using the left and right mouse drag and drop options between windows.
- Use the docking options.
- From the Agent Monitor window, dial an agent's extension.

Bring up the Queue Monitor window:

- Place a couple of calls to the workgroup extension and watch calls in the queue.
- Reset the thresholds from the Queue Monitor window.
- Use view options (compact, detail).

Launch the ShoreTel Voice Mail Viewer: (This can be done from the Windows START/PROGRAMS/SHORETEL menu links.)

- View the personal and shared Workgroup mailbox.
- Forward a workgroup message to an Agent's personal mailbox.
- Change the Subject field.



Lab3 – Using the Operator Call Manager

Extension Monitor

From the Operator Call Manager open the Extension Monitor

- File – Extension Monitor
- Check the boxes next to three extensions you want to appear in the Extension Monitor window

From another phone call one of the extensions you are monitoring. Double Click with your mouse on the ringing icon. What happened?

Call the Operator extension and answer the call. Using a left mouse click, drag the active call from your Call Manager window to an idle extension in the Extension Monitor window. What happened?

Call the Operator extension again and answer the call. This time using a right mouse click, drag the active call from your Call Manager window to an idle extension in the Extension Monitor window. What happened?

Call the Operator extension again and answer the call. This time using a left mouse click, drag the active call from your Call Manager window to a busy extension in the Extension Monitor window. (Note: you will have to set up another call between to extensions for this to work.) What happened?

Set up a three party conference. During the conference, drop one of the parties.

Try different docking options and views for the Extension Monitor.

